



DRIVING EMBEDDED EXCELLENCE

ETAS ASCET V6.4

Administration Guide

Copyright

The data in this document may not be altered or amended without special notification from ETAS GmbH. ETAS GmbH undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license. Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH.

© **Copyright 2021** ETAS GmbH, Stuttgart

The names and designations used in this document are trademarks or brands belonging to the respective owners.

ASCET V6.4 – Administration Guide R07 EN – 10.2021

Contents

1	Introduction	4
1.1	Safety Information	4
1.1.1	Intended Use	4
1.1.2	Classification of Safety Messages	4
1.1.3	Demands on the Technical State of the Product	4
1.2	Privacy Notice	5
1.2.1	Data Processing	5
1.2.2	Data and Data Categories	5
1.2.3	Technical and Organizational Measures	6
1.2.4	Description of ASCET V6.4 Problem Report	6
1.3	ASCET Documentation	7
1.4	ASCET-DIFF Documentation	7
1.5	Presentation of Instructions	7
1.6	Presentation of Supporting Information	8
2	ASCET – Option Customization	9
2.1	Option Definition	9
2.2	External Options in ASCET	10
2.3	Customization Features	10
2.4	Customization Procedure	11
2.4.1	Generated Option Customization File – Extract	12
2.4.2	Options that Cannot be Customized	14
2.4.3	Example *.aoc.xml Option Customization File	16
3	ASCET-SCM	20
3.1	File Extension	20
3.2	Registering Driver DLL	21
4	ASCET-DIFF – Configuring Default Settings	22
4.1	ASCET-DIFF Preferences	22
4.2	Changing Default Settings	22
4.3	Adapting the DamePreferences.properties File	24
4.3.1	Example – DamePreferences.properties File	28
4.3.2	Distributing the Changed DamePreferences.properties File....	29
5	Contact Information	31
	Figures and Tables	32
	Index	33

1 Introduction

This manual addresses tool administrators or system administrators who configure members of the ASCET product family for other users.

Familiarity with the ASCET product family and with the Microsoft Windows® 10 operating system is required.

1.1 Safety Information

Please adhere to the ETAS Safety Advice and to the following safety information to avoid injury to yourself and others as well as damage to property.

1.1.1 Intended Use

ETAS GmbH cannot be made liable for damage which is caused by incorrect use and not adhering to the safety information.

1.1.2 Classification of Safety Messages

The safety messages used here warn of dangers that can lead to personal injury or damage to property:



WARNING

indicates a hazardous situation of medium risk which could result in death or serious injury if not avoided.



CAUTION

indicates a hazardous situation of low risk which may result in minor or moderate injury if not avoided.

NOTICE

indicates a situation which may result in damage to property if not avoided.

1.1.3 Demands on the Technical State of the Product

The following special requirements are made to ensure safe operation:

- Take all information on environmental conditions into consideration before setup and operation (see the documentation of your computer, hardware, etc.).

Further safety advice is available in the following places:

- in the "Safety Information" sections of the various ASCET manuals
- in electronic form in the installation files: `Documentation\ETAS Safety Advice.pdf`
- The ASCET V6.4 safety manual (`ASCET Safety Manual.pdf`) available at ETAS upon request

1.2 Privacy Notice

Your privacy is important to ETAS so we have created the following Privacy Statement that informs you which data are processed in ASCET tools, which data categories ASCET tools use, and which technical measure you have to take to ensure the users' privacy. Additionally, we provide further instructions where this product stores and where you can delete personal data.

1.2.1 Data Processing

Note that personal data or data categories are processed when using this product. As the controller, the purchaser undertakes to ensure the legal conformity of these processing activities in accordance with Art. 4 No. 7 of the General Data Protection Regulation (GDPR). As the manufacturer, ETAS GmbH is not liable for any mishandling of this data.

1.2.2 Data and Data Categories

Please note that this product creates files containing file names and file paths, e.g. for purposes of error analysis, ensuring correct deinstallation, referencing source libraries, or for communicating with third party programs.

The same file names and file paths may contain personal data, if they refer to the current user's personal directory or subdirectories (e.g., `C:\Users\
<UserId>\Documents\...`).

If you do not want personal information to be included in the generated files, please make sure of the following:

- The workspace of the product points to a directory without personal reference.
- All tool settings refer to directories and file names without personal reference.

Tool settings can be accessed as follows:

- ASCET V6.4: menu option **Tools** → **Options** in the Component Manager
- ASCET-DIFF: menu option **Tools** → **Preferences** in the main window
- ASCET-SCM: in the ASCET options window, "Integration\ASCET-SCM" node
- All project settings in ASCET V6.4 (accessed via the menu option **File** → **Properties** in the ASCET project editor) refer to directories and file names without personal reference.
- Windows environment variables (such as the temporary directory) refer to directories without personal reference because these environment variables are used by the product.

In this case, please also make sure that the users of this product have read and write access to the newly set directories.

When using the ETAS License Manager in combination with user-based licenses, particularly the following personal data or data categories are recorded for the purpose of license management:

- User data: UserID
- Communication data: IP address

As an option, the following personal data and/or data categories that can be traced back to a specific individual in particular may be recorded for the purpose of assisting development:

- Problem Report, see section 1.2.4 below

When using the ASCET add-on ASCET-DIFF, particularly the following personal data and/or data categories that can be traced back to a specific individual is recorded for the purposes of user-specific settings and user-specific log files:


- User data: UserID

1.2.3 Technical and Organizational Measures

This product does not itself encrypt the personal data that it records. Please ensure that the data recorded is secured by means of suitable technical or organizational measures in your IT system, e.g. by using classic anti-theft and access protection.

Personal data in generated files can be deleted by tools in the operating system.

1.2.4 Description of ASCET V6.4 Problem Report

 **NOTE**
 The problem report is not available for ASCET-DIFF in standalone mode.

Purpose

When an error occurs, ASCET V6.4 offers to send an error report to ETAS for troubleshooting. ETAS uses the personal information to have a contact person in case of system errors.

Personal Data

The problem report may contain the following personal data or data category:

- user data
 - name and address entered during the installation process
 - UserID
- communication data
 - IP address

Additionally to the problem information that is entered by the users themselves, ASCET collects the available product-related log files in a zip archive to support the bug fixing process at ETAS. The zip file is named by using the following pattern `EtasLogFiles<index number>.zip` and stored in the ETAS-specific log files directory.

This automatically created zip file contains the following:

- product-related log files created at installation time (necessary for uninstall action)
- ETAS log files stored in the ETAS log files directory matching the file name pattern `*.log`

- recursive registry export of ETAS (32bit)-key (and sub keys):
HKEY_CURRENT_USER\Software\ETAS
- registry export of ETAS (32bit)-key (and sub keys):
HKEY_LOCAL_MACHINE\Software\ETAS

All ETAS-related log files in the ETAS-specific log files directory and the zip archives created by the Problem Report feature can be removed after closing all ETAS applications if they are no longer needed.

1.3 ASCET Documentation

ASCET provides an online help and several PDF manuals. The following volumes are stored in the ETAS\ETASManuals folder.

- **ASCET V6.4 Installation.pdf**
- **ASCET V6.4 Getting Started.pdf**
- **ASCET V6.4 AUTOSAR Users Guide.pdf**
- **ASCET V6.4 AUTOSAR To ASCET Converter User Guide.pdf**
- **ASCET V6.4 Icon Reference Guide.pdf**
- **ASCET-RP V6.4 Users Guide.pdf**
- **ASCET-SE V6.4 Users Guide.pdf**
- **ASCET-SE V6.4 EHOOKS Add On Users Guide.pdf**

Using the index, full text search, and hypertext links, you can find references fast and conveniently.

The ASCET, ASCET-RP, and ASCET-SCM online help can be accessed via the <F1> key in the respective windows.

1.4 ASCET-DIFF Documentation

ASCET-DIFF provides an online help and a PDF installation guide. The latter, `ASCET-DIFF V6.4 Installation.pdf`, is stored on the installation disk.

The ASCET-DIFF online help can be accessed via the **Help** → **Help Contents** menu option.

1.5 Presentation of Instructions

The target to be achieved is defined in the heading. The necessary steps for this are in a step-by-step guide:

Target definition

1. Step 1
Explanations are given underneath a step.
2. Step 2
3. Step 3
- > Result

1.6 Presentation of Supporting Information



NOTE

Contains additional supporting information.

2 ASCET – Option Customization

A company may want to restrict the possibilities to set ASCET options or project properties for several reasons, e.g., the following:

- Specific values for ASCET options/project properties are defined by, e.g., coding guidelines.
- If options were modified, the model or the generated code might be wrong or might not fit customers' needs.
- It is difficult to trace a problem back to changed options.

Section 2.1 describes the XML definition of an ASCET option/project property. The External Options mechanism (section 2.2) available in ASCET can be used to add user-defined options to ASCET, and the option customization feature (section 2.3 and 2.4) available in ASCET can be used to adjust default values of options, to make options read-only, and/or to hide options.

2.1 Option Definition

The definition of an option has the following basic format (code sections in *italics* must be replaced with suitable values for each option):

```
<OptionDeclaration
  xmlCategory="path"
  optionCategory="value"
  optionClass="type"
  attributeName="option name"
  optionFile="filename.xml"
  sensitive="true/false"
  visible="true/false">
  <Group>path</Group>
  <Label>text</Label>
  <Description>text</Description>
  <Tooltip>text</Tooltip>
  <InitialValue>value</InitialValue>
  <DefaultValue>value</DefaultValue>
  <Value>value</Value>1
  <FileOption>definition</FileOption>2
  <EnumerationOption>definition</EnumerationOption>2
  <ButtonOption>definition</ButtonOption>2
  <NumericOption>definition</NumericOption>2
</OptionDeclaration>
```

-
1. Not present in the automatically generated options file (cf. page 11 and section 2.4.1); must be added manually. Effective only in *.aoc.xml files.
 2. only available for a special optionClass

2.2 External Options in ASCET

User-defined options can be added to ASCET via a special XML file that you modify to suit your own requirements. The file is stored in the ASCET installation directory; for ASCET to recognize it, it must have the following extension:

***.aod.xml**

For more details, see the ASCET online help, "Component Manager" section.

2.3 Customization Features

Of the attributes and items that form the option declaration of an existing option (see section 2.1), only a few can be customized.

Attribute/Item	Customization		
	allowed	not supported	forbidden
optionCategory			+
attributeName			+
optionClass			+
xmlCategory			+
sensitive	+		
visible	+		
optionFile			+
<Group>		+	
<Label>		+	
<Description>		+	
<Tooltip>		+	
<InitialValue>		+	
<DefaultValue>	+		
<Value>	+		
<FileOption>			+
<EnumerationOption>			+
<ButtonOption>			+
<NumericOption>			+

Tab. 2-1 Customizable option attributes – overview

ASCET remains master of the options, i.e. you *cannot* use customization to do the following:

- delete existing options
- create new options
- change option types
- rename internal option identifiers
- use an invalid or wrong value as default value
- change option dependencies (you cannot change, e.g., that an option becomes editable only if another option has a certain value)

2.4 Customization Procedure

General Procedure:

- A Installing and starting ASCET
- B Creating an option customization file named *.aoc.xml
- C Copying the *.aoc.xml file(s) into the ASCET installation directory
This can be done, e.g., via customized installations.
- D (Re-)Starting ASCET
Upon starting, ASCET first reads the built-in option definitions, and then the customized option definitions in the *.aoc.xml files.

Creating a template for the *.aoc.xml file

1. In the component manager, select **Tools** → **Options** to open the ASCET options dialog window.
2. In the options dialog window, make sure that the focus is in the tree view.
3. Press <ALT> + <D>.

The Windows file selection window opens. The default file name `OptionDeclarations.aoc.xml` is suggested. The file extension `.xml` is predefined and cannot be changed.

The extension `*.aoc.xml` is mandatory for option customization files.

4. Enter path and file name for the option customization file and click on **Save**.

The file is saved. An extract of the file is given in section 2.4.1 on page 12.



NOTE

The generated file contains option types that cannot be customized (see also section 2.4.2). You must remove these option types before you can use the file for option customization.

Creating the *.aoc.xml option customization file

1. Open the automatically created *.aoc.xml file in a suitable editor.
2. Open a new, empty *.aoc.xml option configuration file.
3. Copy the following lines into the new file.

```
<?xml version="1.0" encoding="US-ASCII"?>
<OptionDeclarations
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:noNamespaceSchemaLocation="externalOptions.xsd">

</OptionDeclarations>
```

4. Copy the `<OptionDeclaration>` sections of the options you want to customize into the new file between the `<OptionDeclarations ...>` and `</OptionDeclarations>` tags.

As an alternative, you can remove at least the options that cannot be customized (see section 2.4.2 on page 14) from the automatically created `*.aoc.xml` file.

For clarity, you can remove any options you do not want to customize.

5. For the options you want to customize, proceed as follows.
 - i. Go to the respective `<OptionDeclaration>` section.
 - ii. Set the `visible` attribute to `true` to show the option.
 - iii. Set the `visible` attribute to `false` to hide the option.
 - iv. Set the `sensitive` attribute to `true` to make the option editable.
 - v. Set the `sensitive` attribute to `false` to make the option read-only.
 - vi. Enter the desired `<Value>`.
 - vii. Enter the desired `<DefaultValue>`.



NOTE

Changing an option's default value does **not** change the current value of that option.

6. Save the option customization file.

For the option customization to become effective, the option customization file must be copied to the ASCET installation directory of each ASCET user.

2.4.1 Generated Option Customization File – Extract

```
<?xml version="1.0" encoding="US-ASCII"?>

<OptionDeclarations
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:noNamespaceSchemaLocation="externalOptions.xsd">
  <OptionDeclaration
    optionCategory="FILE"
    attributeName="UserActionsBufferSize"
    optionClass="EtasNumericOption"
    xmlCategory="ToolSettings"
    visible="true"
    sensitive="true"
    optionFile="d:\ETASData\ASCET6.4\User\ml_user\
      userSettings.xml">
  <Group></Group>
  <Label>User Actions Buffer Size</Label>
  <Description>Define the size of last
    &lt;i&gt;n&lt;/i&gt; user actions
    that are stored and transmitted on a walkback
  </Description>
  <Tooltip>Number of user actions to be Stored</Tooltip>
```

```

<InitialValue>100</InitialValue>
<DefaultValue>100</DefaultValue>
<NumericOption>
  <MinValue>0</MinValue>
  <MaxValue>1000</MaxValue>
</NumericOption>
</OptionDeclaration>
...
<OptionDeclaration
  optionCategory="FILE"
  attributeName="WatermarkShow"
  optionClass="EtasContainerOption"
  xmlCategory="EditorSettings\BlockDiagram"
  visible="true"
  sensitive="true"
  optionFile="d:\ETASData\ASCET6.4\User\ml_user\
    userSettings.xml">
  <Group>Appearance\Editors\Block Diagram</Group>
  <Label>Show Watermark</Label>
  <Description>Show Watermarks (e.g. the currently
    selected View) in BDE</Description>
  <Tooltip>Show Watermarks in BDE</Tooltip>
  <InitialValue>>true</InitialValue>
  <DefaultValue>>true</DefaultValue>
</OptionDeclaration>
<OptionDeclaration
  optionCategory="FILE"
  attributeName="WatermarkSize"
  optionClass="EtasNumericOption"
  xmlCategory="EditorSettings\BlockDiagram"
  visible="true"
  sensitive="true"
  optionFile="d:\ETASData\ASCET6.4\User\ml_user\
    userSettings.xml">
  <Group>Appearance\Editors\Block Diagram</Group>
  <Label>Watermark Size (px)</Label>
  <Description>Fontsize of the Watermark in BDE
    </Description>
  <Tooltip>Size of the Watermark</Tooltip>
  <InitialValue>20</InitialValue>
  <DefaultValue>20</DefaultValue>
  <NumericOption>
    <MinValue>1</MinValue>
    <MaxValue>200</MaxValue>
  </NumericOption>
</OptionDeclaration>
...
<OptionDeclaration
  optionCategory="FILE"
  attributeName="PageNumberShow"
  optionClass="EtasBooleanOption"

```

```



xmlCategory="EditorSettings\BlockDiagram"
visible="true"
sensitive="true"
optionFile="d:\ETASData\ASCET6.4\User\ml_user\
  userSettings.xml">
<Group>Appearance\Editors\Block Diagram</Group>
<Label>Show Page Number</Label>
<Description>Show the page number in the BDE
  </Description>
<Tooltip>Show Page Number in BDE</Tooltip>
<InitialValue>>false</InitialValue>
<DefaultValue>>false</DefaultValue>
</OptionDeclaration>
...
<OptionDeclaration
  optionCategory="FILE"
  attributeName="DisplayConnectionPortSelectionBox"
  optionClass="EtasBooleanOption"
  xmlCategory="EditorSettings\BlockDiagram"
  visible="true"
  sensitive="true"
  optionFile="d:\ETASData\ASCET6.4\User\ml_user\
    userSettings.xml">
<Group>Appearance\Editors\Block Diagram</Group>
<Label>Display Connection Port Selection Box</Label>
<Description>Only in Connection Mode: With the mouse
  over the diagram elements there is an extra
  selection box showed for the selection of the
  connection ports.</Description>
<Tooltip>Display the Connection Port Selection Box
  </Tooltip>
<InitialValue>>true</InitialValue>
<DefaultValue>>true</DefaultValue>
</OptionDeclaration>
...
</OptionDeclarations>

```


2.4.2 Options that Cannot be Customized

Only options with simple values can be customized. Options with other than simple values cannot be customized, they can only be hidden and/or set to read-only.


- button and link options (`optionClass="EtasButtonOption"`), e.g. the marked ones shown below

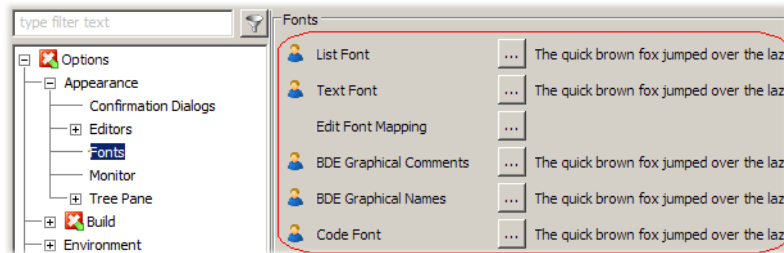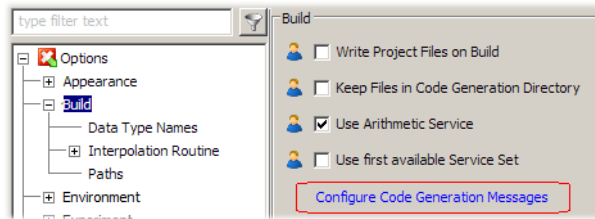

- options used to set several items (`optionClass="EtasMultiSelectConfigurationOption"`), e.g. the one shown below

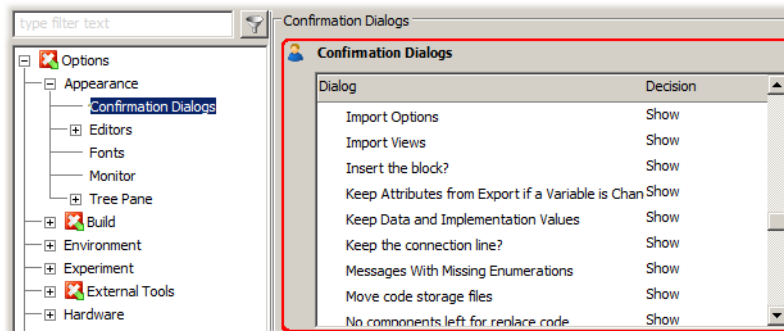


- container options (`optionClass="EtasContainerOption"`), i.e. options with dependent child options, e.g. the one shown below

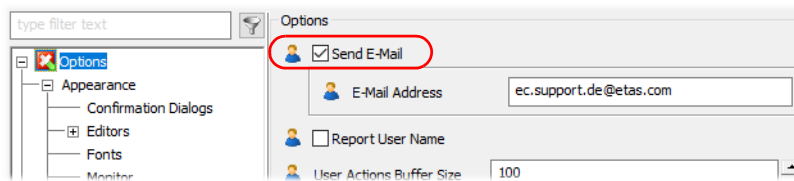


NOTE

If you hide a container option, its child options are hidden, too.

- options with optionClass="EtasEditableEnumerationOption", e.g. the one shown below

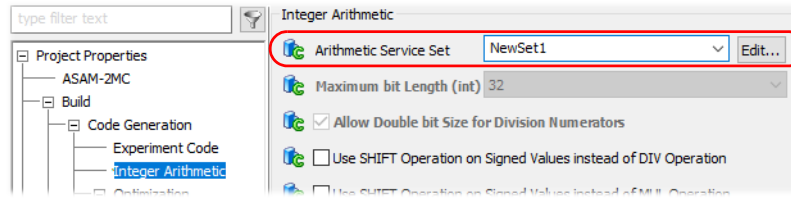

- options with optionClass="EtasEditableXMLFileOption" (A) or "EtasPathTokenFileOption" (B), e.g. the ones shown below

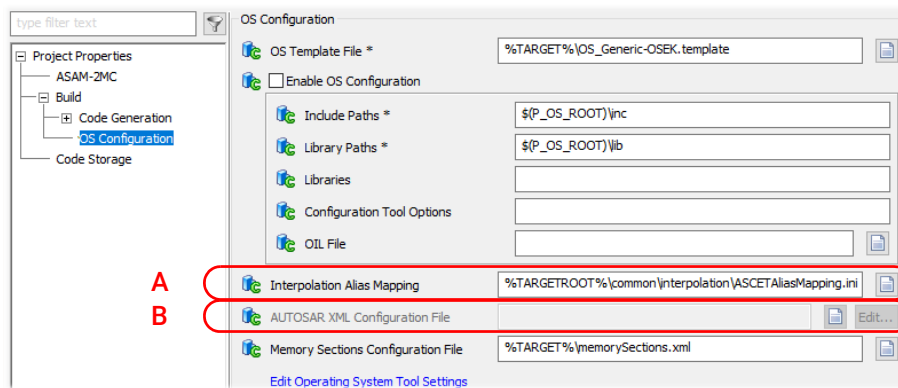

2.4.3 Example *.aoc.xml Option Customization File

By default, the options **Display Connection Port Selection Box**, **Show Watermark** and **Show Page Number** in the "Block Diagram" node of the ASCET options dialog window are visible and editable. The option **Watermark size (px)** is visible, too, and is editable as long as **Show Watermark** is activated.

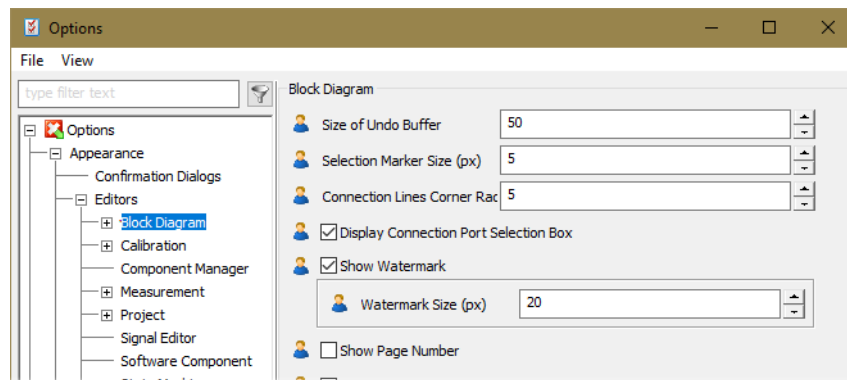


Fig. 2-1 Options with system default values

The following *.aoc.xml file is used to customize the four options. Changed settings are marked in **bold blue**, the option names are marked in **bold black**.

```
<?xml version="1.0" encoding="US-ASCII"?>
<OptionDeclarations
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:noNamespaceSchemaLocation="externalOptions.xsd">
```



```

<OptionDeclaration
  optionCategory="FILE"
  attributeName="WatermarkShow"
  optionClass="EtasContainerOption"
  xmlCategory="EditorSettings\BlockDiagram"
  visible="true"
  sensitive="false"
  optionFile="d:\ETASData\ASCET6.4\User\ml_user\
    userSettings.xml">
  <Group>Appearance\Editors\Block Diagram</Group>
  <Label>Show Watermark</Label>
  <Description>Show Watermarks (e.g. the currently
    selected View) in BDE</Description>
  <Tooltip>Show Watermarks in BDE</Tooltip>
  <InitialValue>true</InitialValue>
  <DefaultValue>true</DefaultValue>
</OptionDeclaration>
<OptionDeclaration
  optionCategory="FILE"
  attributeName="WatermarkSize"
  optionClass="EtasNumericOption"
  xmlCategory="EditorSettings\BlockDiagram"
  visible="true"
  sensitive="true"
  optionFile="d:\ETASData\ASCET6.4\User\ml_user\
    userSettings.xml">
  <Group>Appearance\Editors\Block Diagram</Group>
  <Label>Watermark Size (px)</Label>
  <Description>Fontsize of the Watermark in BDE
  </Description>
  <Tooltip>Size of the Watermark</Tooltip>
  <InitialValue>20</InitialValue>
  <DefaultValue>50</DefaultValue>
  <Value>50</Value>
  <NumericOption>
    <MinValue>1</MinValue>
    <MaxValue>200</MaxValue>
  </NumericOption>
</OptionDeclaration>
<OptionDeclaration
  optionCategory="FILE"
  attributeName="PageNumberShow"
  optionClass="EtasBooleanOption"
  xmlCategory="EditorSettings\BlockDiagram"
  visible="true"
  sensitive="false"
  optionFile="d:\ETASData\ASCET6.4\User\ml_user\
    userSettings.xml">
  <Group>Appearance\Editors\Block Diagram</Group>

```

```

<Label>Show Page Number</Label>
<Description>Show the page number in the BDE
  </Description>
<Tooltip>Show Page Number in BDE</Tooltip>
<InitialValue>>false</InitialValue>
<DefaultValue>>true</DefaultValue>
<Value>>true</Value>
</OptionDeclaration>
<OptionDeclaration
  optionCategory="FILE"
  attributeName="DisplayConnectionPortSelectionBox"
  optionClass="EtasBooleanOption"
  xmlCategory="EditorSettings\BlockDiagram"
  visible="true"
  sensitive="true"
  optionFile="d:\ETASData\ASCET6.4\User\ml_user\
    userSettings.xml">
  <Group>Appearance\Editors\Block Diagram</Group>
  <Label>Display Connection Port Selection Box</Label>
  <Description>Only in Connection Mode: With the mouse
    over the diagram elements there is an extra
    selection box showed for the selection of the
    connection ports.</Description>
  <Tooltip>Display the Connection Port Selection Box
    </Tooltip>
  <InitialValue>>true</InitialValue>
  <DefaultValue>>true</DefaultValue>
  <Value>>false</Value>
</OptionDeclaration>
</OptionDeclarations>

```

The file is copied to a user's ASCET installation directory, and ASCET is started. The "Block Diagram" node now looks as follows:

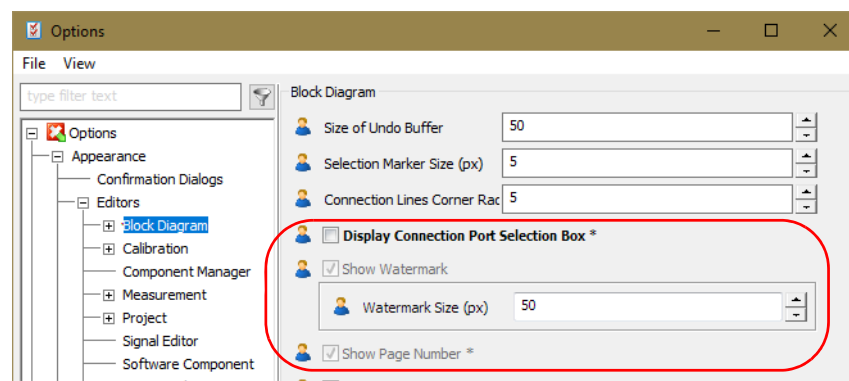


Fig. 2-2 Options with changed <Value> and <DefaultValue>

Show Watermark and **Show Page Number** are now read-only. Since the *.aoc.xml file contains <Value> parameters, the current values of the options are changed (cf. Fig. 2-1).

If you omit the <Value> parameters, and change only the <DefaultValue> parameters, the "Block Diagram" node looks slightly different than in Fig. 2-2: The option values are still the same as the system default (cf. Fig. 2-1), since the option customization file did not change the current option values.

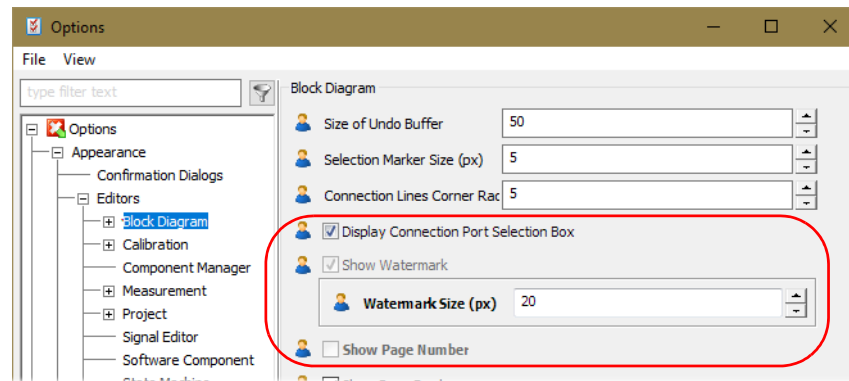


Fig. 2-3 Options with changed <DefaultValue>

The new default values can be set via the **System Defaults** button, but keep in mind that this button restores *all* default values in the selected node.

When ASCET is closed and restarted, the changed values and default values are still in place.

3 ASCET-SCM

3.1 File Extension

ASCET-SCM administrates ASCET model information in CM repositories based on ASCET export files, in a binary format (*.exp) and/or an XML-based format (*.amd). See the ASCET online help for more information on the export formats.

By default, ASCET-SCM contains two drivers: SVN and MSSCCI. The exchanged XML-based artifacts differ between the ASCET standard export and each ASCET-SCM driver as follows:

ASCET standard export: You can export ASCET components in AMD format (several *.amd files for each exported component) or in AXL format (the *.amd files of each component are combined into one ZIP file named *.axl).

Depending on the ASCET export settings, the *.amd files may contain component paths, ASCET experiments etc. or not (non-fixed export settings).

ASCET-SCM SVN driver: The SVN driver uses ZIP files with extension *.zip for exchange with the repository. These ZIP files contain all *.amd files of one component, an XML file with some SCM data for quick and easy access, and optionally the binary export file of the component.

No further ASCET export settings are considered (fixed export settings).

ASCET MSSCCI driver (or MSSCCI based specific drivers): The MSSCCI driver uses ZIP files with extension *.axl for exchange with the repository. The content of this *.axl file is the same as the ZIP file of the SVN driver.

This means that two different AXL file formats exist. The main differences are

- one AXL format includes an XML file with SCM data
- one AXL format has fixed export settings, the other has non-fixed export settings (and may thus include component paths, ASCET experiments, etc.)

Both *.axl file formats can be imported with standard ASCET as well as ASCET-SCM (MSSCCI based drivers). However, a warning is issued when The ASCET-SCM imports (load/check-out) an ASCET standard *.axl file:

```
"[ASCET V5.x format ...]"
```

This file without the SCM data was not created under ASCET-SCM control and its potentially different export settings may lead to unpredictable inconsistencies that cannot be managed by the SCM driver.

To make the two formats easier to distinguish, the MSSCCI driver configuration file, e.g. MSSCCIDriver.gui.xml, contains an option to set the file extension to be used in ASCET-SCM, i.e., the <StorageFileExtension> option. Possible values are AXL, SXL, and AXL/SXL.

The <StorageFileExtension> option is located in the <Basics> area of the driver configuration file.

Example:

```
<?xml version="1.0" encoding="utf-8"?>
<ScmServerSettings xmlns:xsi="http://www.w3.org/2001/
XMLSchema-instance" xmlns:xsd="http://www.w3.org/2001/
XMLSchema">
  <Basics>
    <StorageFileExtension>SXL</StorageFileExtension>
    <AlwaysUpdateSandbox>true</AlwaysUpdateSandbox>
  </Basics>
  ...

```

3.2 Registering Driver DLL

For the communication with the connected CM tool, ASCET-SCM must know the location of its driver DLL.

In case of the SVN driver, the registration is done during the ASCET-SCM installation by user interaction.

CM tools that provide an MSSCCI interface generally register themselves in the following registration path:

```
HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\
  SourceCodeControlProvider\InstalledSCCProviders
```

Some CM tools might miss this registration, or the registration might include an invalid path (e.g., due to an upgrade installation). When working with an MSSCCI driver (or MSSCCI-based specific driver), a message informs the user that the driver DLL cannot be found:

```
No MSSCCI provider found at <pathname>. Please check your
MSSCCI provider installation.
```

In this case, you must manually ensure that the registry is made consistent by creating/changing the following entries.

```
[HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\
  SourceCodeControlProvider\InstalledSCCProviders]
"MKS SCC Integration"="SOFTWARE\Mortice Kern
  Systems\Integrations\SCC\Provider\"
[HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Mortice
  Kern Systems\Integrations\SCC\Provider]
"SccServerName"="MKS SCC Integration"
"SccServerPath"="C:\Program Files (x86)\
  Integrity\ILMClient11.0\bin\mkssiscc.dll"
```

The example shows the registry entries for the PTC Integrity tool.

4 ASCET-DIFF – Configuring Default Settings

A company may want to use a predefined set of comparison configurations, different from the ETAS default configurations, with ASCET-DIFF.

Section 4.1 describes how comparison configurations are treated in ASCET-DIFF, and section 4.2 explains how to change default comparison configurations.

NOTE

Unlike ASCET options, you cannot set the ASCET-DIFF comparison configurations to read-only. Users can change your company defaults.

4.1 ASCET-DIFF Preferences

The "Preferences" window of ASCET-DIFF stores various comparison configurations.

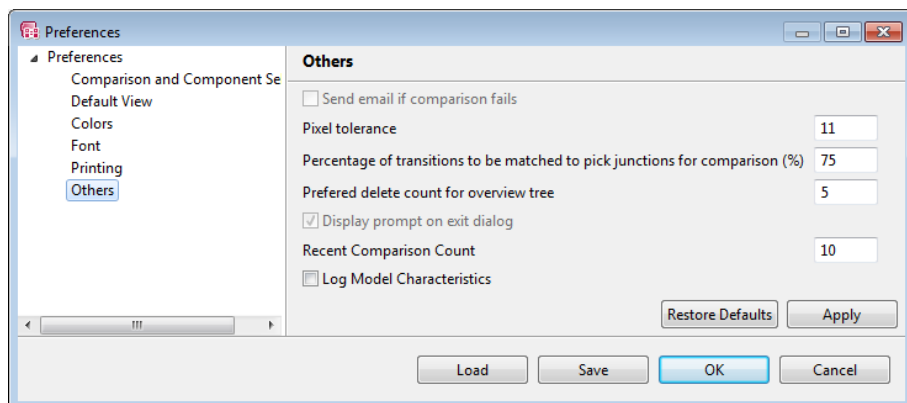


Fig. 4-1 ASCET- DIFF – "Preferences" window

After the installation of ASCET-DIFF, the ETAS default configurations are available in an ASCII file named `DamePreferences.properties` and stored in the `plugins\com.etasgroup.ascet.diff.mainui_1.0.0\resource` folder in the ASCET-DIFF installation directory.

If a user starts ASCET-DIFF for the first time, the options in the "Preferences" window are set to the values in the `DamePreferences.properties` file. In addition, the file is copied to the `workspace\` folder in the ASCET-DIFF workspace location. If the user changes settings in the "Preferences" window, these changes are stored in `...\workspace\\DamePreferences.properties`.

The **Restore Defaults** button available in each node of the "Preferences" window can be used to reset changed values and restore the defaults in a node.

4.2 Changing Default Settings


Changing the ETAS default configurations to company configurations consists of the following steps:

- adapting a copy of the `DamePreferences.properties` file to your company's needs (see section 4.3 and "Example – `DamePreferences.properties` File")
- distributing the changed `DamePreferences.properties` (see "Distributing the Changed `DamePreferences.properties` File")


4.3 Adapting the DamePreferences.properties File

Tab. 4-1 lists the entries in `DamePreferences.properties` file and the location of the respective option in the "Preferences" window. The entries are sorted alphabetically in the table; sorting in the file may differ.

<code>*.properties</code> entry	possible values	name / location in "Preferences" window
<code>bdIndex</code>	[0..8]	BD , "Default View" node
<code>cbrIndex</code>	[0..6]	AUTOSAR Calibration Interface , "Default View" node
<code>ccodeIndex</code>	[0..9]	C Code , "Default View" node
<code>compare</code>	flat / quick / detailed	Comparison Variants field, "Comparison and Component Settings" node
<code>compareComponents</code>	sameName / sameOID / twoSelected	Component selection option field, "Comparison and Component Settings" node
<code>compareOpenClosedHierarchy</code>	true / false	Compare open and closed hierarchy state , "Comparison and Component Settings" node
<code>compareProcess</code>	name / index	Process comparison option field, "Comparison and Component Settings" node
<code>compareSeqCallOrder</code>	true / false	Compare order of sequence calls , "Comparison and Component Settings" node
<code>containerIndex</code>	[0..3]	Container , "Default View" node
<code>csrIndex</code>	[0..6]	AUTOSAR Client Server , "Default View" node
<code>deletedElement</code>	[0..255],[0..255],[0..255]	Right new item color , "Colors" node
<code>diffElement</code>	[0..255],[0..255],[0..255]	Different item color , "Colors" node

<code>*.properties</code> entry	possible values	name / location in "Preferences" window
<code>doSort</code>	 NOTE Obsolete option; has no effect and does not need to be customized.	
<code>enumIndex</code>	[0..2]	Enum , "Default View" node
<code>esdlIndex</code>	[0..8]	ESDL , "Default View" node
<code>Font</code>	all fonts on your PC	Font , "Font" node
<code>FontSize</code>	8, 9, 10, 11	Font Size , "Font" node
<code>ignoreBDComments</code>	true / false	Ignore comments in Graphics , "Comparison and Component Settings" node
<code>ignoreCompManagerComments</code>	true / false	Ignore comments in Component Manager , "Comparison and Component Settings" node
<code>ignoreElementComments</code>	true / false	Ignore comments in Elements , "Comparison and Component Settings" node
<code>ignoreElementOID</code>	true / false	Ignore element OID and method OID , "Comparison and Component Settings" node
<code>ignoreESDLComments</code>	true / false	Ignore comments, spaces and blank lines in ESDL/ CCode , "Comparison and Component Settings" node
<code>ignoreLayout</code>	true / false	Ignore layout , "Comparison and Component Settings" node
<code>ignoreNotes</code>	true / false	Ignore notes , "Comparison and Component Settings" node

<code>*.properties</code> entry	possible values	name / location in "Preferences" window
<code>ignorePosition</code>	true / false	Ignore label position, "Comparison and Component Settings" node
<code>ignoreSequenceCalls</code>	true / false	Ignore sequence calls, "Comparison and Component Settings" node
<code>includeUserIdPrintPage</code>	true / false	Include user ID in print page, "Printing" node
<code>logFeature</code>	true / false	Log Model Characteristics, "Others" node
<code>logoFilepath</code>	path/name of graphic with extension *.jpg/*.png/*.bmp	Logo file path, "Printing" node
<code>minimumScaleFactor</code>	number	Minimum scale factor for Intelligent Layout, "Printing" node
<code>modeGroupIndex</code>	[0..2]	Mode group, "Default View" node
<code>newElement</code>	[0..255],[0..255],[0..255]	Left new item color, "Colors" node
<code>nvdIndex</code>	[0..6]	AUTOSAR NVData Interface, "Default View" node
<code>preferredDeleteCount</code>	integer number	Preferred delete count for overview tree, "Others" node
<code>printHeaderPage</code>	true / false	Print Header Page, "Printing" node
<code>projectIndex</code>	[0..12]	Project, "Default View" node
<code>promptOnExit</code>	true / false	Display prompt on exit dialog, "Others" node

<code>*.properties</code> entry	possible values	name / location in "Preferences" window
<code>propagatedElement</code>	[0..255],[0..255],[0..255]	Propagated item color , "Colors" node
<code>recentComparisonEntries</code>	integer number	Recent Comparison Count , "Others" node
<code>recordIndex</code>	[0..6]	Record , "Default View" node
<code>sameElement</code>	[0..255],[0..255],[0..255]	Identical item color , "Colors" node
<code>sendEmail</code>	 NOTE Obsolete option; has no effect and does not need to be customized.	
<code>sidiff</code>	true / false	Compare Block Diagram/State Machine with SiDiff , "Comparison and Component Settings" node
<code>smIndex</code>	[0..8]	Statemachine , "Default View" node
<code>snrIndex</code>	[0..6]	AUTOSAR Sender Receiver , "Default View" node
<code>swcIndex</code>	[0..11]	AUTOSAR Software Component , "Default View" node
<code>tolerance</code>	integer number	Pixel Tolerance , "Others" node
<code>triggerLevel</code>	[0..100]	Percentage of transitions to be matched to pick junctions for comparison (%) , "Others" node
<code>uncomparedElement</code>	[0..255],[0..255],[0..255]	Not compared item color , "Colors" node

Tab. 4-1 Entries and their possible values in `DamePreferences.properties` and their location in the "Preferences" window of ASCET-DIFF

Open the file in a text editor and edit the file entries according to your needs. Possible values for each option are given in Tab. 4-1. If desired, you can enter comment lines, i.e. lines of the form `# <comment text>` or remove unchanged lines.

4.3.1 Example – `DamePreferences.properties` File

The original version of `DamePreferences.properties` is an unsorted list of `option=value` pairs.

The following example is a changed version of `DamePreferences.properties`. In addition, the entries have been sorted according to the nodes in the "Preferences" window they refer to. Changed settings are marked in **blue bold** font.

```
#Fri May 17 15:08:35 CEST 2013
#
#Comparison and Component Settings
compare=flat
compareComponents=twoSelected
compareOpenClosedHierarchy=true
compareProcess=index
compareSeqCallOrder=false
ignoreBDComments=true
ignoreCompManagerComments=false
ignoreElementComments=true
ignoreElementOID=true
ignoreESDLComments=true
ignoreLayout=false
ignoreNotes=false
ignorePosition=true
ignoreSequenceCalls=false
sidiff=true
#
#Default View
bdIndex=0
cbrIndex=0
ccodeIndex=0
containerIndex=0
csrIndex=0
esdlIndex=0
enumIndex=0
modeGroupIndex=0
nvdIndex=0
```

```

projectIndex=0
recordIndex=0
smIndex=0
snrIndex=0
#
#Colors node
deletedElement=255,0,0
diffElement=0,0,255
newElement=0,255,0
sameElement=0,0,0
uncomparedElement=128,128,128
propagatedElement=255,128,0
#
#Font node
Font=Tahoma
FontSize=8
#
#Printing node
logoFilePath=C:\CI\icons\BMP\AscetDiff_48.bmp
minimumScaleFactor=1.0
printHeaderPage=true
#
#Others node
logFeature=false
preferedDeleteCount=5
promptOnExit=true
recentComparisonEntries=10
sendEmail=false
tolerance=11
triggerLevel=75
#
doSort=true

```

4.3.2 Distributing the Changed

DamePreferences.properties File

To distribute the changed `DamePreferences.properties` file to the users' ASCET-DIFF installations, the following steps are required:

- A Identify the ASCET-DIFF installation path.
You can read the path from a Registry entry.
 - On a 64bit operating system, the entry is located at
HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\ETAS\ASCET-DIFF\6.4.

- On a 32bit operating system, the entry is located at
HKEY_LOCAL_MACHINE\SOFTWARE\ETAS\ASCET-DIFF\6.4.
- B Add \plugins\com.etasgroup.ascet.diff.mainui_1.0.0\resource to the ASCET-DIFF installation path.
The resulting path looks similar to this path:
C:\ETAS\ASCET-DIFF6.4\plugins\
com.etasgroup.ascet.diff.mainui_1.0.0\resource
- C Copy the changed DamePreferences.properties file to the resulting path.

Of course, these steps can be executed by a script.

As soon as the changed DamePreferences.properties file is copied to the proper location, its content is available via the **Restore Defaults** button in the ASCET-DIFF "Preferences" window.



NOTE

The changed DamePreferences.properties file does **not** overwrite existing user-defined preference changes.

5 Contact Information

ETAS Headquarters

ETAS GmbH

Borsigstraße 24

70469 Stuttgart

Germany

Phone: +49 711 3423-0

Fax: +49 711 3423-2106

Internet: www.etas.com

ETAS Subsidiaries and Technical Support

For details of your local sales office as well as your local technical support team and product hotlines, take a look at the ETAS website:

ETAS subsidiaries Internet: www.etas.com/en/contact.php

ETAS technical support Internet: www.etas.com/en/hotlines.php

Figures and Tables

Tab. 2-1	Customizable option attributes – overview	10
Fig. 2-1	Options with system default values	16
Fig. 2-2	Options with changed <Value> and <DefaultValue>	18
Fig. 2-3	Options with changed <DefaultValue>	19
Fig. 4-1	ASCET- DIFF – "Preferences" window	22
Tab. 4-1	Entries and their possible values in <code>DamePreferences.properties</code> and their location in the "Preferences" window of ASCET-DIFF	27

Index

Symbols

- *.aoc.xml file
 - create11
 - create template11
 - example16
 - template (extract)12
- *.axl
 - ASCET-SCM20
- *.sxl
 - ASCET-SCM20

A

- ASCET
 - option customization 9–19
 - see also Option Customization
- ASCET options
 - definition9
 - external10
 - not customizable14
 - see also Option Customization
- ASCET-DIFF
 - configure default settings 22–30
 - preferences22
 - see also default settings (ASCET-DIFF)
- ASCET-SCM
 - file extension20
 - register driver DLL21

C

- contact information31
- customization file
 - ASCET-DIFF24
 - create (ASCET)11
 - example (ASCET)16

D

- DamePreferences.properties
 - file22
 - change24
 - distribute29
 - example (changed)28
- default settings (ASCET-DIFF) 22–30
 - change22
 - DamePreferences.properties .
22
 - restore22
- driver DLL
 - register (ASCET-SCM)21

E

- ETAS contact information31
- ETAS Safety Advice4
- external options (ASCET)10

O

- Option Customization 9–19
 - create customization file11
 - create template file11
 - customization file (example)16
 - features10
 - procedure11
 - template file extract12

P

- privacy5
- Product liability disclaimer4

S

- Safety information4
- technical state4

T

- template *.aoc.xml file
 - create11
 - extract12

X

- XML file
 - *.aoc.xml 11, 16
 - *.aod.xml10