



## Question:

---

**Do the Failure Active LEDs also shine at the slaves at several cascaded ES4440 if an error is active?**



## Answer:

---

**The Failure Active LED shines in case of an active error also at the Slave, but only if the SYNC lines are connected correctly as necessary pin-to-pin.**



## Additional information:

---

The Failure Active LED shines always at the master but not at slaves where no error is active.



## In case of further questions:

---

Please feel free to contact our Support Center, if you have further questions.

Here you can find all information: <http://www.etas.com/en/hotlines.php?langS=true&>

This information (here referred to as „FAQ“) is provided without any (express or implied) warranty, guarantee or commitment regarding completeness or accuracy. Except in cases of willful damage, ETAS shall not be liable for losses and damages which may occur or result from the use of this information (including indirect, special or consequential damages).