

ETAI6

ETK ECU Adapter, JST PHR - JST
PHR (7fc - 5fc), 0m10

Data Sheet



Copyright

The data in this document may not be altered or amended without special notification from ETAS GmbH. ETAS GmbH undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license. Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH.

© Copyright 2018 ETAS GmbH, Stuttgart

The names and designations used in this document are trademarks or brands belonging to the respective owners.

Document ETAI6 R03_EN – 08.2018

Contents

- 1 Introduction.....5
 - 1.1 View.....5
 - 1.2 Installation.....6
- 2 Technical Data7
 - 2.1 ECU Signals7
 - 2.2 Measurement Drawing8
- 3 Ordering Information9
- 4 ETAS Contact Addresses..... 10

Figures

Figure 1: View5
Figure 2: Installation6
Figure 3: Measurement Drawing.....8

1 Introduction

Cable with 5 pin JST-PH connector (ECU-Side) to connect additional ETK-S4.2C signals to the ECU. Short cable to minimize voltage drop at GND and VDDSB RAM.

1.1 View

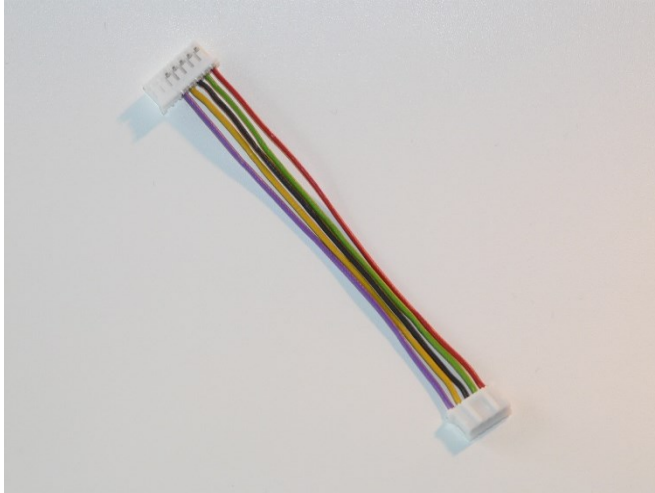 


Figure 1: View

1.2 Installation

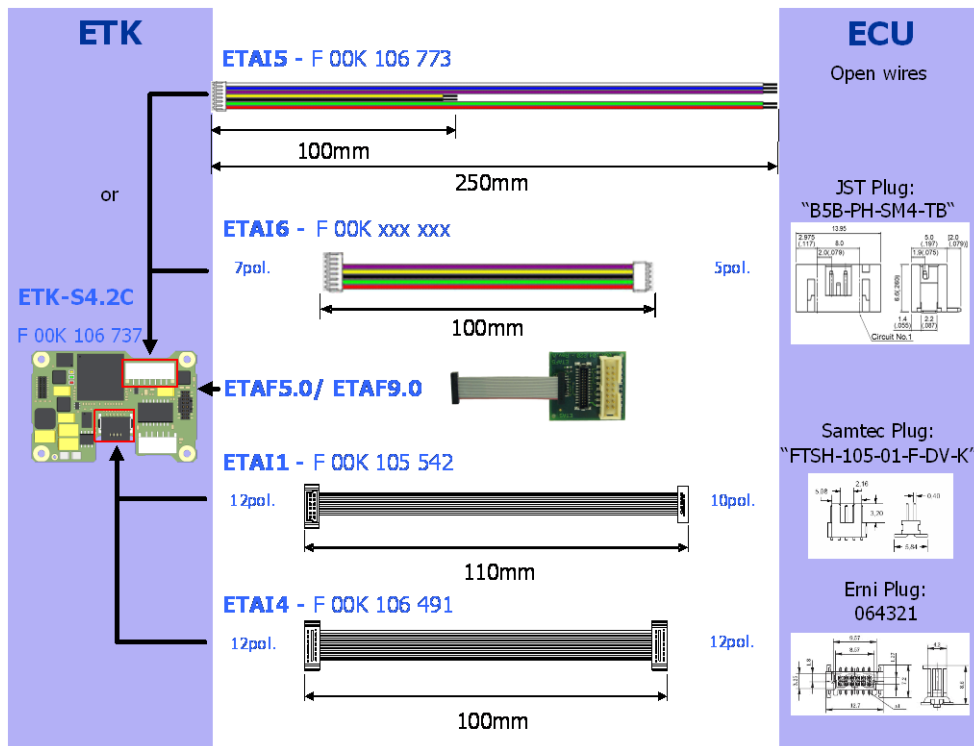 


Figure 2: Installation

2 Technical Data

2.1 ECU Signals


Cable with 5 pin JST-PH connector (ECU-Side) to connect additional ETK-S4.2C signals to the ECU. DAI Signals for triggering and handshake are not connected. Short cable to minimize voltage drop at GND and VDDSB RAM.

Pinlist for the ETAI6 Adapter:

Pin	Color	Signal	Description
1	Red	SGUBATT1	U Battery
2	Green	Cal Wakeup	ECU wake-up signal (for measurement preparation)
3	Black	GND	Signal Ground
4	Yellow	VDDSB RAM (Supply)	Standby (permanent) power supply of ECU RAMs
5	Magenta	/HDRST	ECU Reset signal
6	Blue	DAI1	Data Acquisition Interrupt Line 1
7	White	DAI2	Data Acquisition Interrupt Line 2

2.2 Measurement Drawing

 Measured in mm

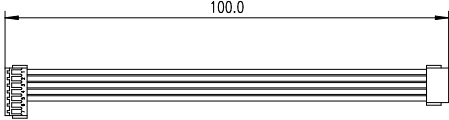

Seite A

Seite B

Figure 3: Measurement Drawing

3 **Ordering Information**

Short Name	Order - Number
ETAI1	F 00K 105 542
ETAI4	F 00K 106 491
ETAI5	F 00K 106 773
ETAI6	F 00K 107 195

4 ETAS Contact Addresses

ETAS HQ

ETAS GmbH

Borsigstraße 24

70469 Stuttgart

Germany

Phone: +49 711 3423 0

Fax: +49 711 3423 2106

WWW: www.etas.com*ETAS Subsidiaries and Technical Support*

For details of your local sales office as well as your local technical support team and product hotlines, take a look at the ETAS website:

ETAS subsidiaries

WWW: www.etas.com/en/contact.php

ETAS technical support

WWW: www.etas.com/en/hotlines.php