



---

# ETAE10

ETK8 Adapter

Order No.: F 00K 102 816



## **Copyright**

---

The data in this document may not be altered or amended without special notification from ETAS GmbH & Co.KG. ETAS GmbH & Co.KG undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license.

Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH & Co.KG.

© **Copyright 1998** ETAS GmbH & Co.KG, Stuttgart

The names and designations used in this document are trademarks or brands belonging to the respective owners.

---

# Contents

1	General	4
1.1	Connection	4
1.2	Views	5
2	Connection of the ETAE10 to the ECU	6
2.1	Connector ST100 to the ECU	6
2.2	Configuration Bridges and Testing Points	7
2.2.1	B2	7
2.2.2	B3	7
2.2.3	B4	7
2.2.4	B5	7
2.2.5	B6	7
2.2.6	B1	7
3	Measurement Drawing	8

## **1 General**

---

The ETAE10 adapter connects an ECU with an ETK8.  
Adaption to the ECU is done by a 60pol SAMTEC connector.


### **1.1 Connection**

---


As counterpart to the ETAE10, a connector of the SAMTEC company (Order No.: SFM-130-02-S-D-K ) must be soldered to the ECU.

## 1.2 Views

---

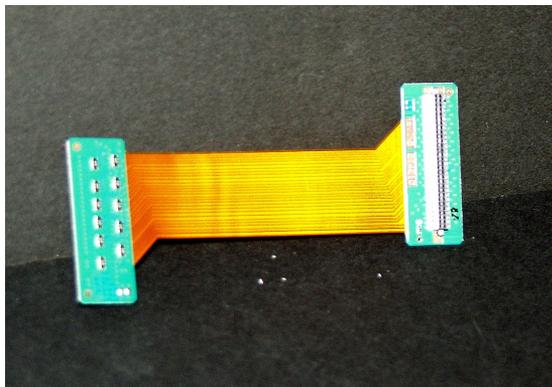

**Figure 1-1** View of ETK-connector

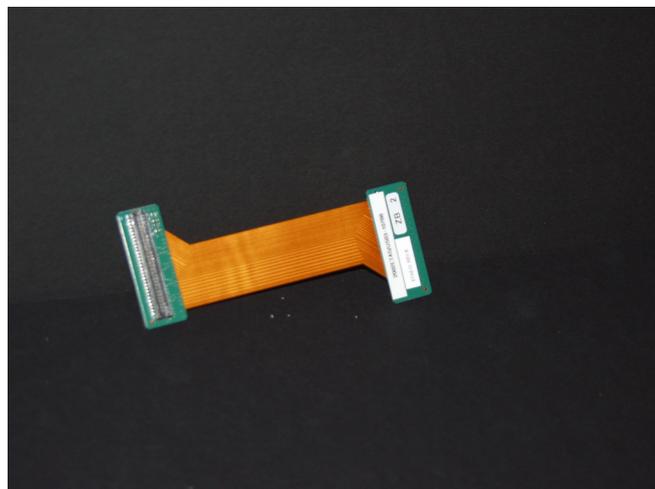

**Figure 1-2** View of ECU-connector

## 2 Connection of the ETAE10 to the ECU

---

### 2.1 Connector ST100 to the ECU

---

Num.	Description	Num.	Description
1	GND	2	D0
3	D1	4	D2
5	D3	6	D4
7	D5	8	D6
9	D7	10	GND
11	D8	12	D9
13	D10	14	D11
15	D12	16	D13
17	D14	18	D15
19	GND	20	A0
21	A1	22	A2
23	A3	24	A4
25	A5	26	A6
27	A7	28	A8
29	A9	30	A10
31	A11	32	A12
33	A13	34	A14
35	A15	36	A16
37	A17	38	A18
39	A19	40	SIZE
41	/CS	42	/WCS
43	GND	44	/RW
45	/SGRD	46	B2
47	GND	48	/DS
49	USG	50	/SGRES
51	IS	52	B3
53	GND	54	B4
55	B5	56	/SGFLSHEN
57	/ETKCON	58	GND
59	UBATT	60	UBATT

## 2.2 Configuration Bridges and Testing Points

---

### 2.2.1 B2

---

B2 connects pin 46 on ECU to pin 46 on ETK.

### 2.2.2 B3

---

B3 connects pin 52 on ECU to pin RES1 on ETK.

### 2.2.3 B4

---

B4 connects pin 54 on ECU to pin RES2 on ETK.

### 2.2.4 B5

---

B5 connects pin 55 on ECU to pin RES3 on ETK.

### 2.2.5 B6

---

B6 connects pin 57 on ECU to pin /ETKCon on ETK.

### 2.2.6 B1

---

Connection	Function
closed (default)	UBatt on ST100 Pin 59 and 60 is connected to the ETK8
open	UBatt on ST100 Pin 59 and 60 is isolated

### 3 Measurement Drawing

---

