



ETAS Entwicklungs- und
Applikationswerkzeuge
für elektronische Systeme
GmbH & Co.KG



ETAF2

ETK Adapter

Order No.: F 00K 001 374

Rev.:01-0799



Copyright

The data in this document may not be altered or amended without special notification from ETAS GmbH & Co.KG. ETAS GmbH & Co.KG undertakes no further obligation in relation to this document. The hardware described in it can only be used if the customer is in possession of a general license agreement or single license.

Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH & Co.KG.

© **Copyright** 1999 ETAS GmbH & Co.KG, Stuttgart. All rights reserved.

The names and designations used in this document are trademarks or brands belonging to the respective owners.

Contents

1	General.....	4
1.1	Connection.....	4
1.2	View.....	4
2	Connector Pinout.....	5
2.1	Pinout AMP connector to ECU.....	5
3	Measurement Drawing.....	7

1 General

The ETAF2 adapter connects an ECU with JTAG-RTD Interface to an ETKS1

1.1 Connection

In order to be able to configure the ETK adapter ETAF2 in the ECU, a AMP connector must be available on the ECU (Order No.: **0-0104549-2**).

1.2 View



2 Connector Pinout

2.1 Pinout AMP connector to ECU

Pin	Signal	Pin	Signal
1	USG (supervise +5V from ECU)	2	USGSTBY (supervise Standby Voltage from ECU)
3	DAI2	4	GND
5	DAI1	6	GND
7	TDI / RTDRXD	8	GND
9	TDO / RTDTXD	10	GND
11	/TRST	12	GND
13	TCK / RTDCLK	14	GND
15	TMS / RTDACK	16	GND
17	/RESET (Power On Reset ECU)	18	GND
19	Reserved	20	GND

3 Measurement Drawing

measured in mm

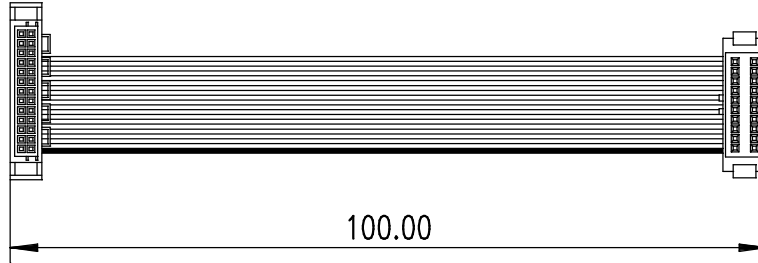


Figure 3-1 Measurement Drawing