



How can the properties of several signals in a Measure Window or Oscilloscope be adapted in a simple procedure?



In order to adjust the settings proceed as follows:

- Open dialog **Properties** for **Measure Window** by right mouse click
- Select the settings to be adjusted by left click while keeping the SHIFT key pressed
- Double click on the settings while keeping the SHIFT key pressed
- Adapt the settings and confirm with OK

Measure window [2]											
in_11Sb			-]0								
in_11Sw	Descriter Numeric di		0								
in_11Ub	Properties: Numeric di	spiay									~
in_11Uw	General	Name	Data Representation	Number of decimals	Bounds range	Monitor bounds visualization	Show Unit	Back- ground	Character color	Device	
In_12SD	Merizontal bar Alert	in 11Sb	phys	2		Marker	Yes	COIOF		ETK test device:1	
in_12Sw		in 11Sw	phys	2		Marker	Yes			ETK test device:1	
in_12Ub		in_11Ub	phys	2		Marker	Yes		-	ETK test device:1	
in_12Uw		in_11Uw	phys	2		Marker	Yes			ETK test device:1	
in_13Sb		in_12Sb	phys	2		Marker	Yes			ETK test device:1	
in_13Sw		in_12Sw	phys	2		Marker	Yes			ETK test device:1	
in_13Ub		in_12Ub	phys	2		Marker	Yes			ETK test device:1	
in_13Uw		in_12Uw	phys	2		Marker	Yes			ETK test device:1	
in_14Sb		in_13Sb	phys	2		Marker	Yes			ETK test device:1	
in 14Sw		in_13Sw	phys	2		Marker	Yes			ETK test device:1	
in 14Ub		in_13Ub	phys	2		Marker	Yes			ETK test device:1	
111_1400		in_13Uw	phys	2		Marker	Yes			ETK test device:1	
In_14UW	-	in_14Sb	phys	2		Marker	Yes			ETK test device:1	
in_15Sb		in_14Sw	phys	4		Marker	Yes			ETK test device:1	
in_15Sw	_	in_14Ub	phys	4		Marker	Yes			ETK test device:1	
in_15Ub		in_14Uw	phys	4	3 30	Marker	Yes			ETK test device:1	
in_15Uw		in_15Sb	phys	4		Marker	Yes			ETK test device:1	
-		in_15Sw	phys	4		Marker	Yes			ETK test device:1	
		in_15Ub	phys	4		Marker	Yes			ETK test device:1	
		in_15Uw	phys	4		Marker	Yes			ETK test device:1	
		This option spec <ctrl+1>: Swite <ctrl+2>: Swite</ctrl+2></ctrl+1>	cifies the range of the mor h to the minimum cell (eo h to the maximum cell (eo	nitor bounds. dit mode only). dit mode only).							^
									(OK Canc	el Default

Adjustments apply to all selected variables.



Please feel free to contact our Support Center, if you have further questions. Here you can find all information: <u>http://www.etas.com/en/hotlines.php</u>

This information (here referred to as "FAQ") is provided without any (express or implied) warranty, guarantee or commitment regarding completeness or accuracy. Except in cases of willful damage, ETAS shall not be liable for losses and damages which may occur or result from the use of this information (including indirect, special or consequential damages).