

• In System Editor there is a PDU displayed in violet font color



• What does the violet font color mean?



- When a PDU is displayed in violet font color then it is not mapped to a Frame
- The PDU is also listed under folder Unmapped PDUs



## Map the PDU to a Frame

1. Create a new frame (for example a CAN frame): On **Frames**  $\rightarrow$  Right mouse button click  $\rightarrow$  **Create Frame**  $\rightarrow$  **CanFrame** 



2. On right hand side, under **Available Pdus**: Drag and drop the unmapped PDU into the table on panel **Pdus** mapped to Frame

ystem editor : CanFrame_0 [ CanFrame ]			» 🖞 🕶 🔒	8 B ()
System Elements	중 InterfCU 4x  ▶  응 frames  ▶  응 CanFrames  ▶  Ш Canframe 0		Create New/Map Existing Elements	Þ
type filter text   Image: Signal Groups (0)   Image: Signal Groups (0)   Image: Signal Brdus (3)   Image: Signal Brdus (2)   Image: Signal Brdus (2)		Remove	Create New Elements III New PDU Available Pdus type filter text III Debug III Torque III IsignaliPdu_0	*
	PDU Name Length Start Posit Updateindicati MetaDatal drag and drop			

3. Result: The PDU is mapped to a Frame  $\rightarrow$  Font color is black now

*System Editor 🛛						
ystem editor : CanFrame_0 [ Can	Frame ]					
System Elements	Y▼ BInterECU	4x 🕨 🕞 Frames 🕨 🔓	CanFrames	■ IIII <u>CanFram</u>	<u>e 0</u>	
type filter text						
🛱 Signals (4)		es				
Signal Groups (0)	ShortNam	* CanErame 0				
🗸 🔄 Pdus (3)	Shortvarn	canname_o				
🗸 🕞 ISignallPdus (3)	Length (By	tes) 8			215	
> 🔳 Debug [Len: 8Bytes]	Lenger (b)	0				
> 🔳 Torque [Len: 8Bytes]						
🔳 ISignallPdu_0 [Len: 8Bytes]	Polya m	uned to Frome				
> 🕞 Frames (3)	• ruus m	apped to rialite				
✓						
> 🧼 Debug						
> 🧼 WiperControl	Showin	g: 1/1   🖭 C 🧕 🌾	🖉   Filter :			
🕞 Gateways (0)						
V 🛞 Networks (1)	PE	)U Name	Length	Start Posit	UpdateIndicati	MetaDatal
🕞 Autosar Nm (0)		9				
✓ □ Can Networks (1)		IIC: IID I O	1 A D 1	Υ Λ	T CET	IT NOT OT
> 🙁 CanCluster_0		i SignaliPdu_0	8 Bytes	U	NUT_2E1	NUT_SET
🕞 TpConfigs (0)						
✓ ➡ Ethernet Networks (0)						
🔄 TpConfigs (0)						



- This article applies to:
- ISOLAR-A V9.x
- ISOLAR-A V10.0 10.5
- ISOLAR-B V4.x
- ISOLAR-B V5.x



Please feel free to contact our Support Center, if you have further questions. Here you can find all information: <u>http://www.etas.com/en/hotlines.php?langS=true&</u>

This information (here referred to as "FAQ") is provided without any (express or implied) warranty, guarantee or commitment regarding completeness or accuracy. Except in cases of willful damage, ETAS shall not be liable for losses and damages which may occur or result from the use of this information (including indirect, special or consequential damages).