



Question:

Opening of workspace and experiment of an LABCAR-OPERATOR project is not successful.

The following error message can be found in the Log window:

Error on loading plugin data: System.NullReferenceException: Object reference not set to an instance of an object.

With display language "German":

Error on loading plugin data: System.NullReferenceException: Der Objektverweis wurde nicht auf eine Objektinstanz festgelegt.




Answer:

Probably the related EE Workspace has become corrupted.


This might happen because of reasons like system crashes, unexpected handling of files etc.

A known solution is to regenerate the Workspace for the affected project:


1. Close all ETAS tools.
2. Make a backup copy of the affected project (project folder, including all subfolders).
3. Delete the Workspace folder within the project folder (the folder containing the *.eew file).

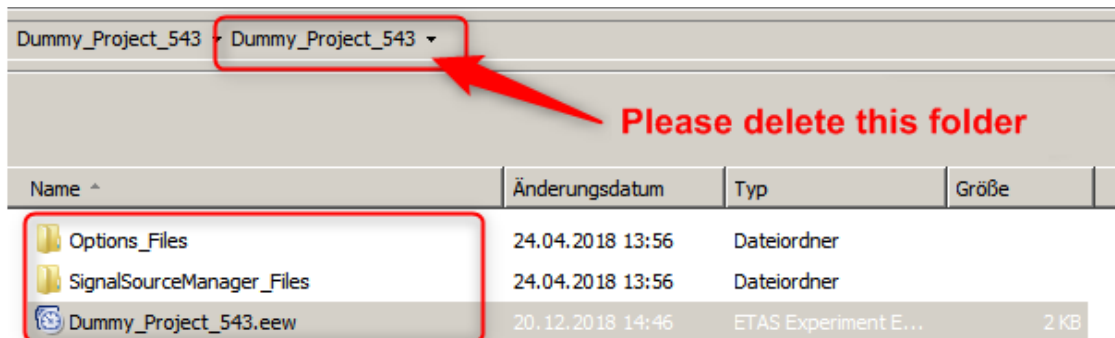

4. Open the related project.

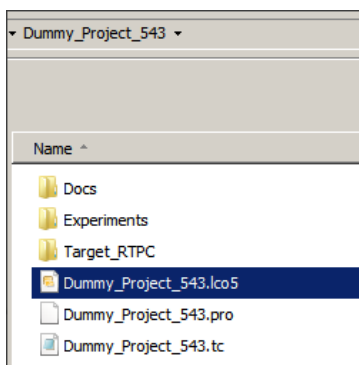

5. Completely rebuild the project without any changes made before.
After the build is finished the Workspace folder has been regenerated:

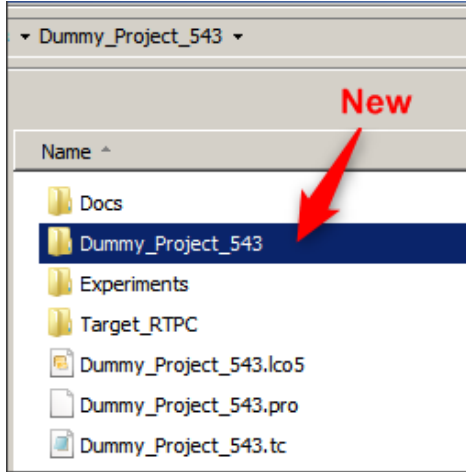

Additional information:

In case the steps described above are not sufficient, try to remove and regenerate the Experiments folder as well. Opening the project with the Experiment Environment once may be needed to finish this task.



In case of further questions:

Please feel free to contact our Support Center, if you have further questions.
Here you can find all information: <http://www.etas.com/en/hotlines.php?langS=true&>

This information (here referred to as „FAQ“) is provided without any (express or implied) warranty, guarantee or commitment regarding completeness or accuracy. Except in cases of willful damage, ETAS shall not be liable for losses and damages which may occur or result from the use of this information (including indirect, special or consequential damages).