
ES1391.1

Power Supply Controller Board

User's Guide

Copyright

The data in this document may not be altered or amended without special notification from ETAS GmbH. ETAS GmbH undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license. Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH.

© **Copyright 2003 - 2007** ETAS GmbH, Stuttgart

The names and designations used in this document are trademarks or brands belonging to the respective owners.

R1.0.2 EN - 01.2007

TTN F 00K 102 732

Contents

1	Introduction	5
1.1	Applications	6
1.2	Features	7
1.3	Front Panel	8
1.4	Block Diagram	9
2	Hardware	11
2.1	Power Supply Control Unit	12
2.1.1	Digital Inputs	12
2.1.2	Digital Outputs	13
2.1.3	Analog Inputs	14
2.1.4	Analog Outputs	15
2.2	Switch Control Unit	17
2.2.1	Functions of the Switch Control Unit	17
2.2.2	Control Output for Battery Nodes 0...4	17
2.2.3	Alarm Input for Error Monitoring	18
2.2.4	+UBatt and -UBatt Contacts	19
2.2.5	Configuration Output for Battery Node 0	19
2.2.6	Main Relay Input (MRC)	20

2.2.7	Programming Port for the EEPROM of the ES1392.1 High Current Switch Board	22
2.3	Addressing the ES1391.1 at the VMEbus	23
2.4	Optional Piggybacks	26
3	Jumper Assignment	27
3.1	Jumper Description	28
3.1.1	JP0: Configuration of the Main Relay Input for Switch Control Unit 0	29
3.1.2	JP1: Configuration of the Main Relay Input for Switch Control Unit 1	29
3.1.3	Jumper fields JF0 and JF1: Configuration of the Power Supply Control Units PwrCtrl 0 and PwrCtrl 1	29
4	Pin Assignment	31
4.1	Assignment of the Connectors for the Power Supply Control Units PwrCtrl 0 and 1	31
4.2	Assignment of the Connectors for the Switch Control Units SwCtrl 0 and 1	33
5	Accessories	35
5.1	Cables	35
5.1.1	CBAV310.1-2 Cable between the ES1391.1 and the Power Supply for Battery Voltages ES4080, ES4081	35
5.1.2	CBV300.1-0.5 Cable: Connection between the ES1391.1 and the ES1392.1	36
6	Technical Data	39
7	ETAS Contact Addresses	43
	Index	45

1 Introduction

This section contains information about the basic features and applications of the ES1391.1 Power Supply Controller Board. A block diagram is also included here to show the schematic layout of the board.

note

Some components of the ES1391.1 may be damaged or destroyed by electrostatic discharges. Please keep the board in its storage package until it is installed.

The ES1391.1 Power Supply Controller Board should only be taken from its package, configured and installed at a working place that is protected against static discharge.

note

The components, connectors and conductors of the ES1391.1 Power Supply Controller Board may carry dangerous voltages. These voltages may even exist when the ES1391.1 is not installed in the ES4100, ES4105 or ES4300 or the ES4100, ES4105 or ES4300 is powered off. Make sure that the ES1391.1 is protected against contact during operation. Disconnect all connections to the ES1391.1 before removing the board.

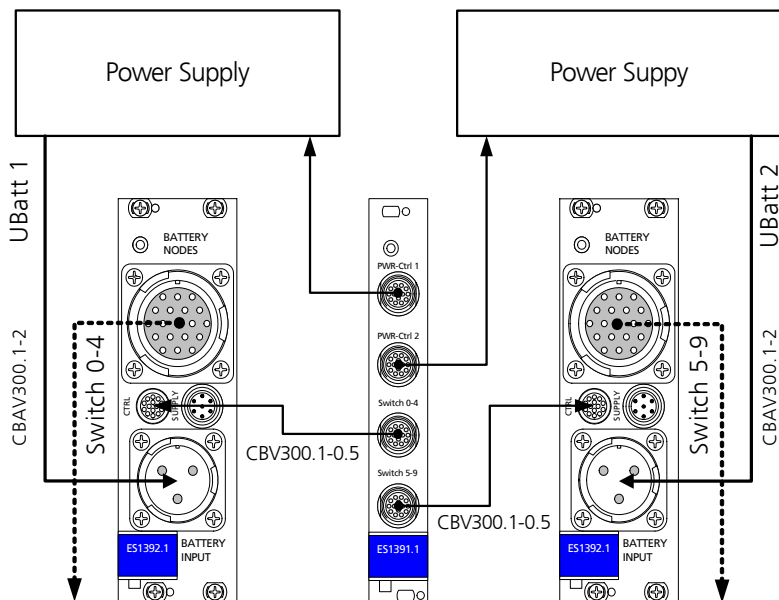


Fig. 1-1 Use of the ES1391.1 Power Supply Controller Board to Address Two Power Supplies and Two ES1392.1 High Current Switch Boards

The ES1391.1 Power Supply Controller Board has two functions:

- addressing and controlling up to two external power supplies
- addressing up to two ES1392.1 High Current Switch Boards

Thanks to its architecture the ES1391.1 can also be used generally as a D/A and A/D converter board and to acquire and output digital signals.

The ES1391.1 Power Supply Controller Board can be used to simulate two power supplies with e.g. 12 V and 42 V (two-voltage power supply). Up to ten battery nodes can be switched together with the ES1392.1 High Current Switch Board.

The ES1391.1 Power Supply Controller Board has four functional units. Two of these are used to address and control the external power supplies: power supply control units PwrCtrl 0 and PwrCtrl 1 (PwrCtrl: power control). The other two units are used to address the ES1392.1 Boards: switch control units SwCtrl 0 and SwCtrl 1 (SwCtrl: switch control).

The ES1391.1 Power Supply Controller Board has a VMEbus interface which is used to connect it to the VME backplane of the ES4100, ES4105 or ES4300 Signal Box.

1.2

Features

The ES1391.1 Power Supply Controller Board has the following features:

- Two 14-pin PwrCtrl connectors for addressing a maximum of two power supplies
 - One power supply control unit (PwrCtrl) contains
 - two analog outputs (D/A converters) for setting the target voltage and the target current; output voltage range: 0...10 V, output current: max. 10 mA, D/A converter resolution: 14-bit
 - two analog inputs (A/D converters) for acquiring actual variables (actual voltage and current) of the power supply: input voltage range: 0...10 V, A/D converter resolution: 16-bit
 - three digital inputs for tapping status signals of the power supply, e.g. "overvoltage", "overcurrent" or "overheating"
 - two digital outputs which can be configured for powering on/off the power supply
 - all analog and digital inputs and outputs are galvanically isolated
 - Two 14-pin SwCtrl connectors for addressing a maximum of two ES1392.1 High Current Switch Boards
 - One switch control unit (SwCtrl) contains
 - five outputs for addressing up to five high-current switches per interface
 - level detection for the main relay signal with pull-up circuit to battery voltage and pull-down circuit to battery ground. The pull-up and pull-down circuit is configured using jumpers
 - an alarm input for monitoring error states such as overcurrent or overheating on the connected ES1392.1 High Current Switch Board
 - programming port for the versioning EEPROM of the connected ES1392.1
- All analog and digital inputs/outputs have an overvoltage and short protection (exception: programming port for the serial EEPROM of the ES1392.1)
- Overvoltage protection ± 60 V, short protection against ground
- Simulation of two power supplies with e.g. 12 V and 42 V possible (one ES1392.1 High Current Switch Board is required for each supply voltage)

- Occupies one VME slot

1.3 Front Panel

The following figure shows the front panel of the ES1391.1 Power Supply Controller Board

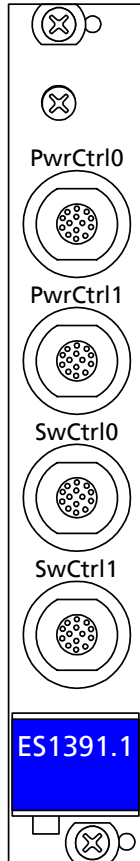


Fig. 1-2 Front Panel of the ES1391.1 Power Supply Controller Board

1.4 Block Diagram

Fig. 1-3 shows the block diagram of the ES1391.1 Power Supply Controller Board.

The individual functions and interfaces of the board are described below.

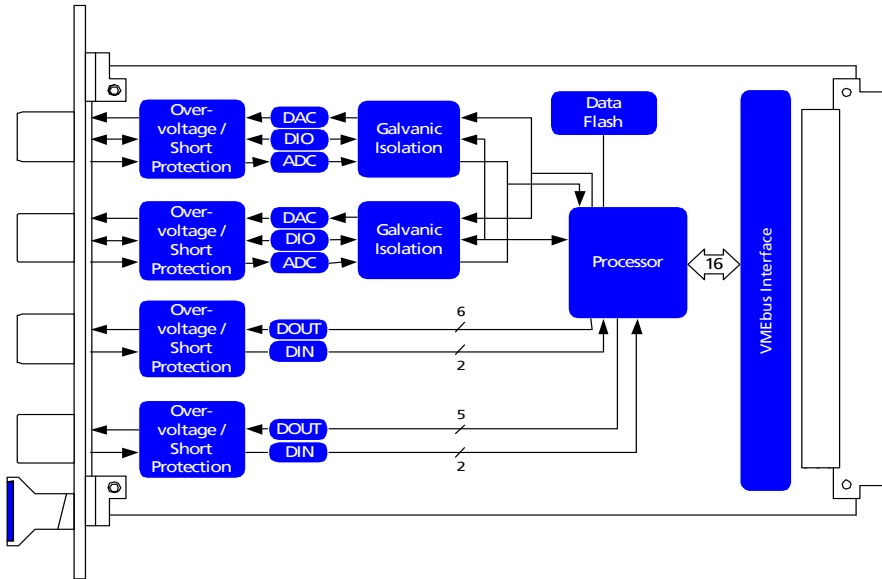


Fig. 1-3 Block Diagram of the ES1391.1 Power Supply Controller Board

Overvoltage and Short Protection

All inputs/outputs of the top two power supply control units have both overvoltage and short protection. All inputs/outputs (digital and analog) are galvanically isolated.

All inputs/outputs of the bottom two switch control units also have both overvoltage and short protection. The only exception is the programming port for the EEPROM of the ES1392.1.

D/A and A/D Converters

A D/A converter with 14-bit resolution is used to generate the analog output signals. The A/D converter for converting the pending analog variables at the interface has 16-bit resolution. For details of the technical data, refer to "Analog Inputs" on page 14 and "Analog Outputs" on page 15.

Motorola MPC555 Processor

The Motorola MPC555 is the processor used. It is responsible for signal generation, measure variable processing and communication with the VMEbus. It generates the digital and analog output signals and cyclically acquires all digital and analog input signals. For details of the technical data, refer to "Technical Data" on page 39.

VMEbus Interface

The ES1391.1 has a VMEbus slave interface. The base address can be set dynamically by accessing the register or statically using hex switches.

For more information and addressing possibilities, refer to "Addressing the ES1391.1 at the VMEbus" on page 23.

Data Flash

The Data Flash contains versioning information of the ES1391.1 and the calibration data of the analog and digital inputs/outputs.

2

Hardware

This chapter contains the descriptions of the hardware of the ES1391.1 Power Supply Controller Board. It consists of the following sections:

- "Power Supply Control Unit" on page 12, description of the inputs/outputs with technical data
 - "Digital Inputs" on page 12
 - "Digital Outputs" on page 13
 - "Analog Inputs" on page 14
 - "Analog Outputs" on page 15
- "Switch Control Unit" on page 17
 - "Functions of the Switch Control Unit" on page 17
 - "Control Output for Battery Nodes 0...4" on page 17
 - "Alarm Input for Error Monitoring" on page 18
 - "+UBatt and -UBatt Contacts" on page 19
 - "Configuration Output for Battery Node 0" on page 19
 - "Main Relay Input (MRC)" on page 20
 - "Programming Port for the EEPROM of the ES1392.1 High Current Switch Board" on page 22
- "Main Relay Function" on page 20: main relay switching and functions
- "Addressing the ES1391.1 at the VMEbus" on page 23
- "Optional Piggybacks" on page 26

2.1 Power Supply Control Unit

The power supply control unit has a connector with 14 pins. The unit is used for addressing and controlling an external power supply.

Digital outputs can be configured depending on the power supply used. They can be used, for example, to power on/off the power supply or power on/off the supply voltage of the power supply (e.g. with the ES4080, ES4081 from Takasago). The digital inputs detect overvoltage or overheating of the power supplies. Every analog and digital input/output is galvanically isolated.

2.1.1 Digital Inputs

Every digital input has a pull-up/pull-down circuit for power supplies whose status lines have an "open collector" at the output. This circuit is configured using jumpers.

Block Diagram

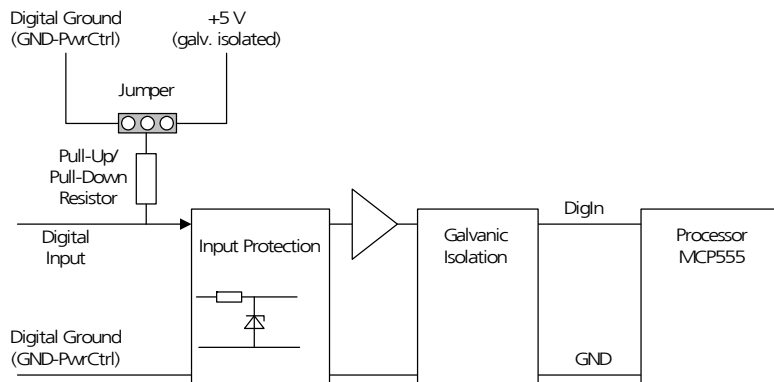


Fig. 2-1 Block Diagram of the Digital Inputs

For more details on jumper configuration, refer to "Jumper c: Digital Input 0" on page 30.

Technical Data of the Digital Inputs

Input Variable	Data
Input voltage	TTL
Input current	< 5 mA
Overvoltage protection	Yes, to ± 60 V
Galvanic isolation	Yes
Sampling rate	1 ms

Tab. 2-1 Technical Data of the Digital Inputs

2.1.2 Digital Outputs

The digital outputs of a power supply control unit can be realized either as simple switching contacts (open collector output) or can be assigned a pull-up to 5 V by setting a jumper (TTL output).

Short-circuit-proof PhotoMOS relays are used as switching contacts. Their turn-on time is approx. 500 μ s. Their turn-off time is approx. 80 μ s.

The pull-up functionality is realized with constant current sources which provide an output current of 10 mA.

The delay times of the switching contacts are small in comparison to the typical response times of the addressed power supplies. These are over 100 ms when setting voltage states; with high-current circuits the delay time is over 50 ms. This means that the delay time can be ignored with digital outputs.

Block Diagram

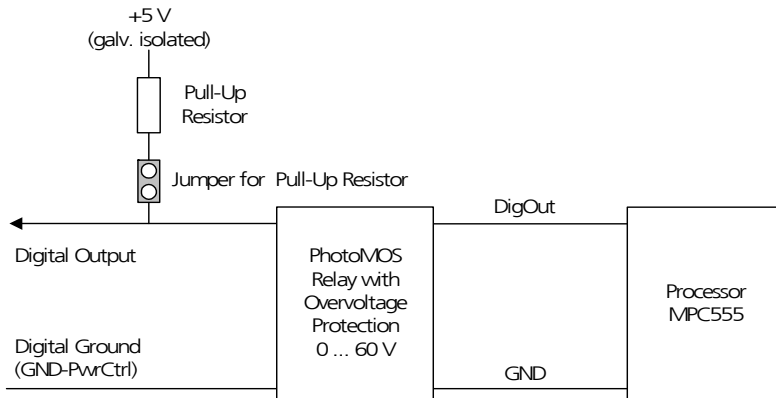


Fig. 2-2 Block Diagram of the Digital Outputs

For more details on jumper configuration, refer to "Jumper a: Digital Output 0" on page 30 and "Jumper b: Digital Output 1" on page 30.

Technical Data of the Digital Outputs

Output Variable	Data
Output voltage	Open collector/TTL
Output current	10 mA
Overvoltage protection	Yes, to ± 60 V
Galvanic isolation	Yes
Switching frequency	Max. 500 Hz

Tab. 2-2 Technical Data of the Digital Outputs

2.1.3 Analog Inputs

Serial A/D converters are used to measure the analog signals of the power supplies. The galvanic isolation takes place in the serial connection between the A/D converter and the MPC555 processor.

Block Diagram

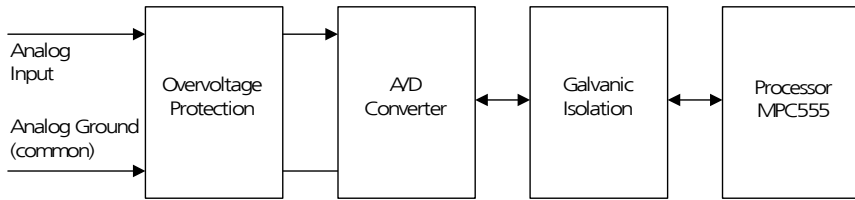


Fig. 2-3 Block Diagram of the Analog Inputs

Technical Data of the Analog Inputs

Input Variable	Data
Input voltage	0 to 10 V
Input impedance	>1 M Ω
Accuracy	± 3 mV (10.7-bit) typical
Resolution	16-bit
Sampling rate	1 ms
Galvanic isolation	Yes
Overvoltage protection	Yes, to ± 60 V

Tab. 2-3 Technical Data of the Analog Inputs

2.1.4 Analog Outputs

Serial D/A converters are used to generate the analog control voltages for the power supply. The galvanic isolation takes place in the serial connection between the D/A converter and the MPC555 processor.

Block Diagram

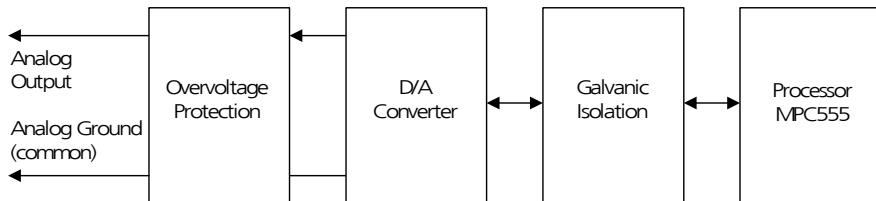


Fig. 2-4 Block Diagram of the Analog Outputs

Technical Data of the Analog Outputs

Output Variable	Data
Output voltage	0 to 10 V
Output current	10 mA
Resolution	14-bit
Accuracy	±2 mV (11.2-bit) typical
Galvanic isolation	Yes
Overvoltage protection	Yes, to ±60 V

Tab. 2-4 Technical Data of the Analog Outputs

2.2 Switch Control Unit

The switch control unit has a connector with 14 pins. It provides control signals for addressing the battery nodes (relays) of the ES1392.1 High Current Switch Board. The pins also have other functions which are explained below.

2.2.1 Functions of the Switch Control Unit

- Control output for battery nodes 0...4
- Configuration output for battery node 0
- Alarm input for error monitoring
- Main relay control input (MRC = Main Relay Control)
- Programming port for the EEPROM of the ES1392.1)

2.2.2 Control Output for Battery Nodes 0...4

This output switches the relevant relay on the ES1392.1. H level activates the relay, i.e. it is closed, L level deactivates the relay, i.e. it is opened. An open output is brought down to L level on the ES1392.1 by pull-down. This means that if an output is open, the battery node is deactivated.

Control Signal	Switch
L/open	Open
H	Closed

Tab. 2-5 Control Signal and Switch Position when Addressing the Battery Node

The following table shows the technical data of the control output for battery node x

Control Output of Battery Node x	Data
Output voltage	TTL
Output current	10 mA
Galvanic isolation	No
Overvoltage protection	Yes, to ± 60 V

Tab. 2-6 Technical Data of the Control Output for Battery Node x

2.2.3 Alarm Input for Error Monitoring

The ES1391.1 Power Supply Controller Board is informed of any errors, e.g. overcurrent or overheating at the battery node, by the ES1392.1 High Current Switch Board via the alarm input.

The user can define the reaction of the ES1391.1 firmware when an error arises via the RTIO configuration software. The ES1391.1 can power off both, one or none of the power supplies addressed by the ES1391.1 as a reaction to an active alarm signal.

If an error is detected at one of the battery nodes on the ES1392.1 High Current Switch Board, the ES1392.1 opens the relevant node. After a delay time of max. 800 ms, the node is automatically opened again to check whether the error has been recovered. The node is opened immediately when an overcurrent reoccurs. This is repeated until no overcurrent occurs. This also has an effect on the power supplies connected to the ES1391.1 Power Supply Controller Board.

note

The cyclical current pulses during an overcurrent can exceed the current limitation of some power supplies. In this case, the battery voltage should be buffered with a large capacitor at the output of the power supply or a low-impedance power resistor should be inserted into the battery voltage line to limit the current.

State	Status Signal
Normal operation	L
Error	H

Tab. 2-7 Level at the Alarm Input during Normal Operation and an Error
The following table contains the technical data of the alarm input:

Alarm Input	Data
Input voltage	TTL
Input current	<1 mA
Galvanic isolation	No
Overvoltage protection	Yes, to ± 60 V

Tab. 2-8 Technical Data of the Alarm Input for Error Monitoring

2.2.4 +UBatt and -UBatt Contacts

These contacts carry the supply voltage for the pull-up and pull-down resistors of the main relay input (MRC).

The following table contains the technical data of the +UBatt and –UBatt contacts:

+UBatt/-UBatt Contact	Data
Input voltage	0 to 60 V
Input current	Max. 1 A
Galvanic isolation	Yes
Oversvoltage protection	Yes, to 60 V

Tab. 2-9 Technical Data of the +UBatt and –UBatt Contacts

2.2.5 Configuration Output for Battery Node 0

Battery node 0 on the ES1392.1 High Current Switch Board can be switched against the battery voltage +UBatt and also (alternatively) against the battery ground –UBatt.

If high is pending at the configuration output, battery node 0 switches to battery ground; if low is pending, the battery node switches to battery voltage.

Level at the Configuration Output	Response of Battery Node 0
L (Low)	Switches to battery voltage
H (High)	Switches to battery ground

Tab. 2-10 Response of Battery Node 0 Depending on the Level at the Configuration Output

The following table contains the technical data:

Control Output of Battery Node x	Data
Output voltage	TTL
Output current	10 mA
Galvanic isolation	No
Oversvoltage protection	Yes, to ± 60 V

Tab. 2-11 Technical Data of the Configuration Output for Battery Node 0

2.2.6 Main Relay Input (MRC)

Depending on the signal at the main relay input, the battery nodes can be activated or deactivated. The user defines which battery nodes depend on the main relay and whether the main relay signal is high-active or low-active via the RTIO.

The following table contains the technical data of the main relay input:

Main Relay Input	Data
Input voltage	0 to 60 V
Input current	0-20 V: 100 mA, 20-40 V: 50 mA, 40-60 V: 33 mA
Galvanic isolation	Yes
Overvoltage protection	Yes, to ± 60 V

Tab. 2-12 Technical Data of the Main Relay Input

Main Relay Function

The ES1391.1 makes it possible to evaluate an existing signal from the connected ECU directly in the hardware for addressing a main relay (MRC=Main Relay Control) and to include this in the activation/deactivation of the individual battery nodes. The ECU signal is accepted by the ES1392.1 High Current Switch Board and routed from this board to the main relay input of the ES1391.1.

Depending on the state of the main relay signal, individual battery nodes can be activated. The battery nodes dependent on the MRC signal are defined using the RTIO configuration software.

The main relay input of the ES1391.1 Power Supply Controller Board can be assigned a pull-up to battery voltage or a pull-down to battery ground.

A subsequent comparison with the half battery voltage returns logical level information (high or low) which is supplied to the processor. The processor then decides whether the signal is active or inactive based on the polarity set by the user for the main relay signal (low-active or high-active) via the RTIO configuration software. The processor closes or opens those battery nodes which are controlled by the status of the main relay input in accordance with this active/inactive information.

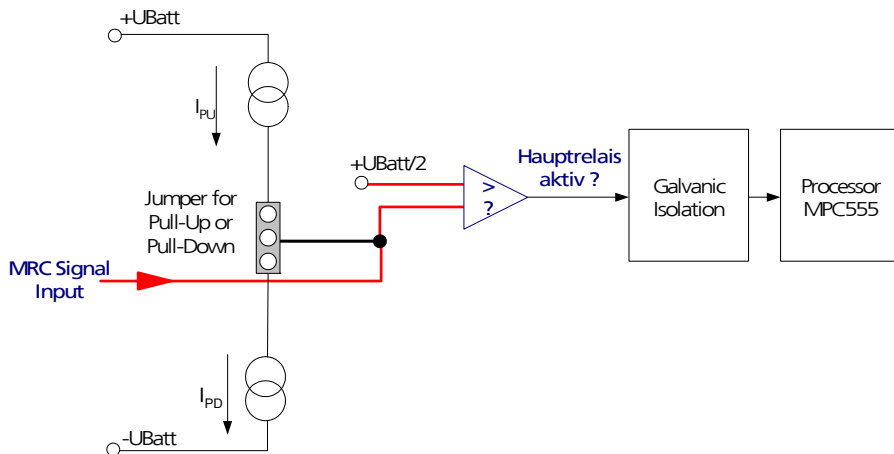


Fig. 2-5 Logic and Jumper Function with Main Relay Function

Whether the main relay signal is assigned a pull-up or pull-down circuit is selected using jumpers (for more details on the configuration of the jumpers, refer to "JP0: Configuration of the Main Relay Input for Switch Control Unit 0" on page 29 and "JP1: Configuration of the Main Relay Input for Switch Control Unit 1" on page 29). The user specifies the circuit of the main relay input via the jumpers.

The pull-up/pull-down function on the ES1391.1 is realized with current sources. The current sources are designed to return different currents for the simulation of the pull-up and pull-down resistors depending on the pending battery voltage +UBatt.

Battery Voltage +UBatt	Size
0 to 20 V	100 mA
20 to 40 V	50 mA
40 to 60 V	33 mA

Tab. 2-13 Dependency of the Current on the Battery Voltage

note

A minimum battery voltage of 4 V is necessary to ensure that the logic circuit on the ES1391.1 correctly detects the level at the main relay input. The hysteresis is 1 V.

2.2.7 Programming Port for the EEPROM of the ES1392.1 High Current Switch Board

Via this port, the EEPROM of the ES1392.1 High Current Switch Board is read and programmed by the ES1391.1. The ES1391.1 then transfers the data to the host system. This means that the configuration and versioning information can be read from the EEPROM.

The EEPROM is accessed via a 1-Wire[®] interface.

Programming Port	Data
Input voltage	TTL
Galvanic isolation	No
Overvoltage protection	No

Tab. 2-14 Technical Data of the Programming Port for the EEPROM

2.3 Addressing the ES1391.1 at the VMEbus

The ES1391.1 Power Supply Controller Board can be operated both in VMEbus and in VME64x systems with geographical addressing. With two rotary switches, SW1 and SW2, the board is addressed in the relevant address spaces in the setting "0x00" in "geographical addressing mode" and in all other settings.

VMEbus	
On-chip Registers 22 Byte	0x0000 0x0015
Reserved	0x7FFF 0x8000
/CSO (DPRAM) 32 kByte	0xFFFF

Fig. 2-6 Address Map

In the "0x00" setting, the ES1391.1 Board overlays 256 bytes into the A24 address space depending on the slot position. Depending on the available memory area, the 64 kB address space is then assigned dynamically by the system controller.

Slot Position	Address	VME Interface (Control Register)
1	E0E000 - E0E0FF	256 bytes
2	E0E100 - E0E1FF	256 bytes
3	E0E200 - E0E2FF	256 bytes
4	E0E300 - E0E3FF	256 bytes
5	E0E400 - E0E4FF	256 bytes
6	E0E500 - E0E5FF	256 bytes
7	E0E600 - E0E6FF	256 bytes
8	E0E700 - E0E7FF	256 bytes
9	E0E800 - E0E8FF	256 bytes
10	E0E900 - E0E9FF	256 bytes
11	E0EA00 - E0EAFF	256 bytes
12	E0EB00 - E0EBFF	256 bytes
13	E0EC00 - E0ECFF	256 bytes
14	E0ED00 - E0EDFF	256 bytes
15	E0EF00 - E0EFFF	256 bytes
16	E0F000 - E0F0FF	256 bytes
17	E0F100 - E0F1FF	256 bytes
18	E0F200 - E0F2FF	256 bytes
19	E0F300 - E0F3FF	256 bytes
20	E0F400 - E0F4FF	256 bytes

Tab. 2-15 Slot Position and Address

The 64 kB address space is assigned statically with every other setting of the hex switches ($\neq 0x00$).

Switch Setting	Address Space
0x01	010000 - 01FFFFFF
0x02	020000 - 02FFFFFF
0x03	030000 - 03FFFFFF
..	.
..	.
..	.
0xFF	FF0000 - FFFFFFFF

Tab. 2-16 Address Space Settings

SW1	SW2
0xn0	0x0n
Address A23 - A20	Address A16 - A19

Tab. 2-17 Switch for Address Setting

Example:

Required: base address A24 at 0xC20000

Settings: SW1=0xC, SW2=0x2

note

The default setting is: SW1=0x0, SW2=0x0

2.4 Optional Piggybacks

The main relay outputs of some ECUs make increased requirements of the impedance resp. of the pull-up and pull-down currents of the main relays.

The optional piggyback enables the user to increase the pull-up and pull-down currents of the main relay input by connecting other current sources or resistors in parallel and thus to reduce the input impedance in accordance with the specific requirement..

note

Project-specific piggybacks are developed by ETAS as part of the engineering services.

3 Jumper Assignment

The ES1391.1 Power Supply Controller Board has five jumpers, seven connectors, one DIP switch and two Hex switches for configuration and allocation of the board.

This chapter explains which jumpers, connectors and switches are relevant for the user, describes their functions and how they can be set.

Position of the Jumpers on the Board

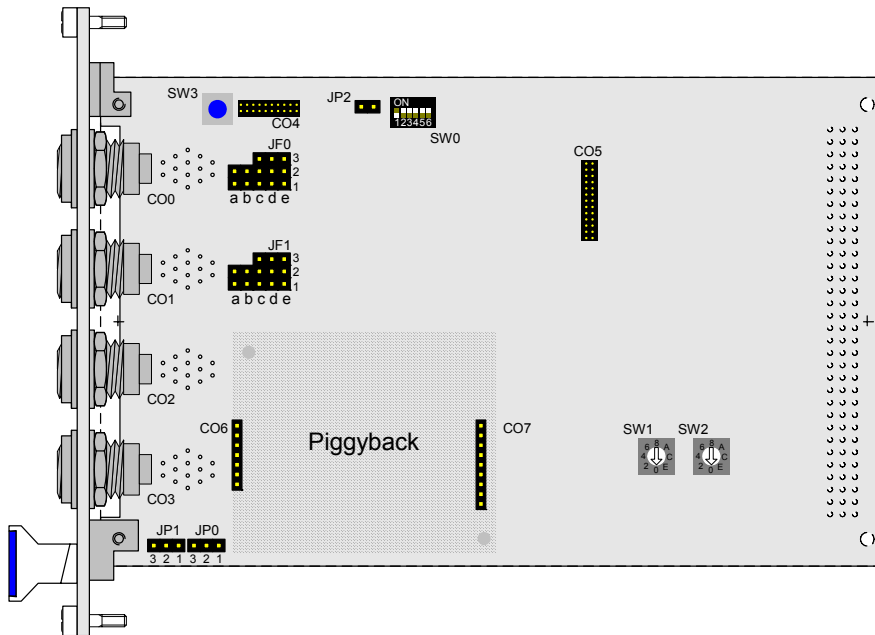


Fig. 3-1 Jumpers, Connectors and Switches on the ES1391.1

Connector Function

Connector	Function
CO0	Power supply control unit 0 (PwrCtrl 0)
CO1	Power supply control unit 1 (PwrCtrl 1)
CO2	Switch control unit 0 (SwCtrl 0)
CO3	Switch control unit 1 (SwCtrl 1)
CO4	Not relevant for users (multiple connector, functions: RS232, debug interface, JTAG interface, boundary scan interface)
CO5	Reserved
CO6	1st post rail for piggyback
CO7	2nd post rail for piggyback

Function of the Button, the DIP Switch and the Hex Switches

Switch	Function
SW0	Not relevant for users (boot configuration of the MPC555)
SW1	Setting the addresses on the VMEbus
SW2	Setting the addresses on the VMEbus
SW3	Board's reset switch

3.1 Jumper Description

Jumper Name	Function
JP0	Configuration of the main relay input for switch control unit 0
JP1	Configuration of the main relay input for switch control unit 1
JP2	Configuration debug port, jumper is not relevant for users
JF0	Configuration of power supply control unit 0
JF1	Configuration of power supply control unit 1

3.1.1 JP0: Configuration of the Main Relay Input for Switch Control Unit 0

Position	Function
1-2	Pull-up circuit to +UBatt active
2-3	Pull-down circuit to -UBatt (ground) active
open	Pull-down/pull-up circuit open

3.1.2 JP1: Configuration of the Main Relay Input for Switch Control Unit 1

Position	Function
1-2	Pull-up circuit to +UBatt active
2-3	Pull-down circuit to -UBatt (ground) active
open	Pull-down/pull-up circuit open

3.1.3 Jumper fields JF0 and JF1: Configuration of the Power Supply Control Units PwrCtrl 0 and PwrCtrl 1

JF0: Configuration of PwrCtrl 0

JF1: Configuration of PwrCtrl 1

Each jumper field consists of jumpers a to e.

Jumper a: Digital Output 0

Position	Function
set	Pull-up active
open	Open collector output

Jumper b: Digital Output 1

Position	Function
set	Pull-up active
open	Open collector output

Jumper c: Digital Input 0

Position	Function
1-2	Pull-down circuit active
2-3	Pull-up circuit active
open	Pull-down/pull-up circuit open/inactive

Jumper d: Digital Input 1

Position	Function
1-2	Pull-Down circuit active
2-3	Pull-up circuit active
open	Pull-down/pull-up circuit open/inactive

Jumper e: Digital Input 2

Position	Function
1-2	Pull-down circuit active
2-3	Pull-up circuit active
open	Pull-down/pull-up circuit open/inactive

4 Pin Assignment

This chapter explains the pin assignment of the connectors of the power supply control and switch control units of the ES1391.1 Power Supply Controller Board.

These are:

- "Assignment of the Connectors for the Power Supply Control Units PwrCtrl 0 and 1" on page 31
- "Assignment of the Connectors for the Switch Control Units SwCtrl 0 and 1" on page 33

4.1 Assignment of the Connectors for the Power Supply Control Units PwrCtrl 0 and 1

Type: Lemo ECG.1B.314.NLV

Assignment of the PwrCtrl connector (view from the plug-in side).

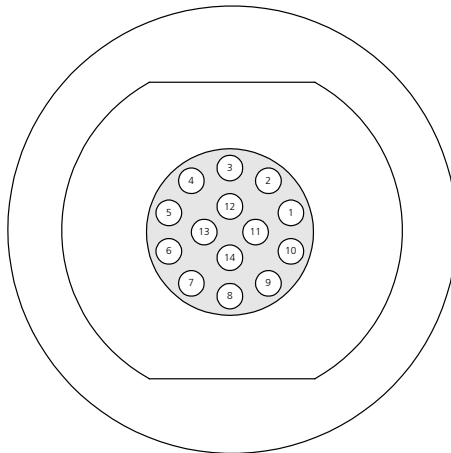


Fig. 4-1 PwrCtrl Connector Pins

Pin	Signal
1	Analog output 0 signal
2	Analog output 0 GND
3	Analog output 1 signal
4	Analog output 1 GND
5	Analog input 0 signal
6	Analog input 0 GND
7	Analog input 1 signal
8	Analog input 1 GND
9	Digital output 0 signal
10	Digital output 1 signal
11	Digital input 0 signal
12	Digital input 1 signal
13	Digital input 2 signal
14	Digital GND

Tab. 4-1 Pin Assignment of the PwrCtrl Connectors

The mating connector is of type Lemo FGG.1B.314.CLAD76

4.2 Assignment of the Connectors for the Switch Control Units SwCtrl 0 and 1

Type: Lemo ECG.1B.314.NLV

Assignment of the SwCtrl connector (view from the plug-in side).

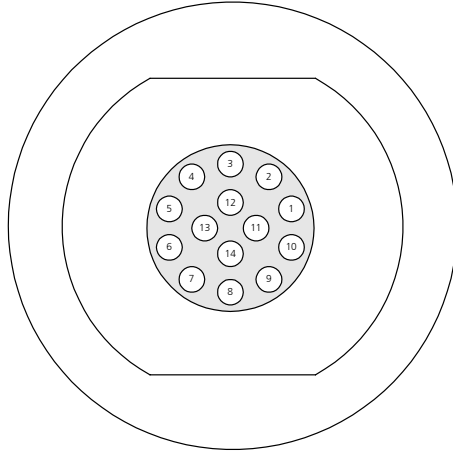


Fig. 4-2 SwCtrl Connector Pins

Pin	Signal
1	Control output switch 0
2	Control output switch 1
3	Control output switch 2
4	Control output switch 3
5	Control output switch 4
6	Not assigned
7	Alarm input for error statuses
8	Battery voltage +UBatt
9	Battery ground (-UBatt)
10	Configuration output for node 0
11	Main relay input (MRC)
12	Ground node 0-4/ ground alarm signal
13	ES1392.1 EEPROM signal
14	ES1392.1 EEPROM ground

Tab. 4-2 SwCtrl Connector Pin Assignment

The mating connector is of type Lemo FGG.1B.314.CLAD76

5 Accessories

5.1 Cables

Two cables are necessary to connect the ES1391.1 Power Supply Controller Board: these are described below.

5.1.1 CBAV310.1-2 Cable between the ES1391.1 and the Power Supply for Battery Voltages ES4080, ES4081

Product Data

Short name	CBAV310.1-2
Long name	Cable Lemo 1B FGG-Hirose DX30 (14mc-28mc, 2m)
Product part number	F 00K 103 224

Specification

Cable length	2 m
Type	14-wire

Connector

To the ES1391.1	Lemo FGG.1B.314.CLAD76
To the power supply	Hirose HRS DX30-28P

Function	ES1391.1 LEMO FGG Connection	Power Supply Connection Hirose HRS
Target voltage	1	2
Target voltage ground	2	3
Target current	3	8
Target current ground	4	3
Actual voltage	5	18

Function	ES1391.1 LEMO FGG Connection	Power Supply Connection Hirose HRS
Actual voltage ground	6	3
Actual current	7	19
Actual current ground	8	3
Output on/off	9	23
AC input on/off	10	22
Alarm	11	27
CV status (voltage)	12	12
CC status (current)	13	13
Ground (DGND)	14	28
Protective earth (PE)	Front panel	Front panel

5.1.2 CBV300.1-0.5 Cable: Connection between the ES1391.1 and the ES1392.1

Product Data

Short name	CBV300.1-0.5
Long name	Cable Lemo 1B FGG - Lemo 1B FGG (14mc - 14mc, 0.5m)
Product part number	F 00K 103 217

Specification

Cable length	0.5 m
Type	14-wire

Connector

To the ES1391.1	Lemo FGG.1B.314.CLAD76 (connection, solder version)
To the ES1392.1	Lemo FGG.1B.314.CLAD76 (connection, solder version)

Function	ES1391.1 LEMO FGG Connection	ES1392.1 LEMO FGG Connection
Control signal switch 0	1	1
Control signal switch 1	2	2
Control signal switch 2	3	3
Control signal switch 3	4	4
Control signal switch 4	5	5
Not assigned	6	6
Signal switch alarm	7	7
+UBatt	8	8
-UBatt	9	9
Configuration of switch 0	10	10
MRC signal	11	11
Ground – switches 0-4	12	12
ES1392.1 EEPROM signal	13	13
ES1392.1 EEPROM ground	14	14
Protective earth (PE)	Front panel	Front panel

6 Technical Data

This chapter contains the technical data of the ES1391.1 Power Supply Controller Board.

The technical data on the power supply control units and the switch control units are described in the relevant sections. "Power Supply Control Unit" on page 12, "Switch Control Unit" on page 17.

Power Supply Control Interface

Configuration	2 interfaces
Analog output channels	2 per interface
Analog output resolution	14-bit
Analog output accuracy	± 2 mV (11.2-bit) typical
Analog output voltage	0 ... 10 V
Analog output current	Max. 10 mA
Analog input channels	2
Analog input resolution	16-bit
Analog input accuracy	± 3 mV (11.7-bit) typical
Analog input voltage	0 ... 10 V
Analog input impedance	> 1 MOhm
Digital output channels	2
Digital output level	Open collector/TTL (jumper configurable)
Digital output current	Max. 10 mA
Digital input channels	3
Digital input level	TTL with jumper configurable pull-up or pull-down circuitry
Digital input current	< 5 mA
Galvanic isolation	Yes
Overvoltage protection	± 60 V

Switch Control Interface

Configuration	2 interfaces
Switch control output channels	5
Switch control output level	TTL
Switch control output current	Max. 10 mA
Alarm input channels	1
Alarm input level	TTL
Alarm input current	< 1 mA
Overvoltage protection	Yes
MRC (main relay control) input level	0...60 V
MRC pull-up/pull-down resistor simulation	130 mA@0...20 V 70 mA@20...40 V 50 mA@40...60 V
MRC pull-up/down supply voltage (\pm UBatt)	0...60 V
External versioning interface	1 (1-Wire [®])
Galvanic isolation	No
Overvoltage protection for versioning interface	No

Microprocessor

Main processor	Motorola MPC555, 40 MHz, 32-bit
Memory	512 kByte external SRAM 512 kByte serial Flash memory 32 kByte Dual Ported RAM for the VMEbus

VME Conformity

VME specification	Revision C.1, October 1985 and IEC 821-1987
Type	Slave with geographical addressing in acc. with VME64x
Address/data bus	A24:D16
Address modifier	39 (hex): A24 non-privileged data access
Base address	\$000000-FF0000 jumper-programmable or by VME64x backplane slot detection automatically
Memory map	Standard I/O space, occupying 64 kB
Backplane	160-pin VME64 connector strip
Interrupts	Single level, IRQ 1 – 7 By software: – IRQ level – interrupt vector source

Power Supply

Current consumption	+5 V DC $\pm 5\%$, 1850 mA max.
---------------------	----------------------------------

Environmental Conditions

Operating temperature	0 °C to 70 °C (32 °F to 158 °F)
Storage temperature	-55 °C to +85 °C (-67 °F to 185 °F)
Relative humidity	0 to 95% (non-condensing)

Dimensions

Height	3 U
Width	4 HP (occupies 1 VME slot)

7 **ETAS Contact Addresses**

ETAS HQ

ETAS GmbH

Borsigstr. 14	Phone:	+49 711 8 96 61-0
70469 Stuttgart	Fax:	+49 711 8 96 61-105
Germany	E-mail:	sales@etas.de
	WWW:	www.etasgroup.com

North America

ETAS Inc.

3021 Miller Road	Phone:	+1 888 ETAS INC
Ann Arbor, MI 48103	Fax:	+1 734 997-9449
USA	E-mail:	sales@etas.us
	WWW:	www.etasgroup.com

Japan

ETAS K.K.

Queen's Tower C-17F	Phone:	+81 45 222-0900
2-3-5, Minatomirai, Nishi-ku	Fax:	+81 45 222-0956
Yokohama 220-6217	E-mail:	sales@etas.co.jp
Japan	WWW:	www.etasgroup.com

Great Britain

ETAS Ltd.

Studio 3, Waterside Court	Phone:	+44 1283 54 65 12
Third Avenue, Centrum 100	Fax:	+44 1283 54 87 67
Burton-upon-Trent	E-mail:	sales@etas-uk.net
Staffordshire DE14 2WQ	WWW:	www.etasgroup.com
Great Britain		

France

ETAS S.A.S

1, place des Etats-Unis
SILIC 307
94588 Rungis Cedex
France

Phone: +33 (1) 56 70 00 50
Fax: +33 (1) 56 70 00 51
E-mail: sales@etas.fr
WWW: www.etasgroup.com

Korea

ETAS Korea Co. Ltd.

4F, 705 Bldg. 70-S
Yangjae-dong, Seocho-gu
Seoul 137-889
Korea

Phone: +82 2 57 47 - 016
Fax: +82 2 57 47 - 120
E-mail: sales@etas.co.kr

China

ETAS (Shanghai) Co., Ltd.

2404 Bank of China Tower
200 Yinchon Road Central
Shanghai 200120, P.R. China

Phone: +86 21 5037 2220
Fax: +86 21 5037 2221
E-mail: sales.cn@etasgroup.com
WWW: www.etasgroup.com

Index

Symbols

+UBatt 19

A

A/D converter 9
Accessories 35
Alarm input 18
Analog inputs 14
Analog outputs 15
Applications 6

B

Battery node 17, 19
Battery nodes 6
Block diagram 5, 9

C

Cables 35
Configuration output 19
Connector 27
Control output 17

D

D/A converter 9
Data flash 10
Digital inputs 12
Digital outputs 13
DIP switch 27

E

EEPROM 22
Error monitoring 18
ES4080 12
ES4081 12

F

Features 7
Front panel 8

H

Hardware 11
Hex switch 27
High-current switch 7

I

Introduction 5

J

Jumper assignment 27

M

Main relay input 20

Motorola 10

MPC555 10

MRC 19, 20

MRC signal 20

O

Open collector 13

Overvoltage protection 9

P

Piggybacks 26

Pin assignment 31

Power control 12

Power supply control unit 7, 12

Processor 10

Programming port 22

Pull-down 12

Pull-down main relay 19

Pull-up 12

Pull-up main relay 19

PwrCtrl 6

S

Short protection 9

Signal box 7

SwCtrl 6

Switch control 17

Switch control unit 7, 17

T

Takasago 12

Technical data 39

U

-UBatt 19

V

VME backplane 7

VME slot 8

VMEbus interface 7, 10