

---

# PB1651PWM1 Module

User's Guide

## Copyright

---

The data in this document may not be altered or amended without special notification from ETAS GmbH. ETAS GmbH undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license. Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH.

© **Copyright 2004 - 2007** ETAS GmbH, Stuttgart

The names and designations used in this document are trademarks or brands belonging to the respective owners.

R1.0.2 EN - 03.2007

TTN F 00K 103 877

---

# Contents

|            |                                     |    |
|------------|-------------------------------------|----|
| <b>1</b>   | Introduction . . . . .              | 5  |
| <b>1.1</b> | Features and Applications . . . . . | 5  |
| <b>1.2</b> | Block Diagram . . . . .             | 7  |
| <b>2</b>   | Hardware Features . . . . .         | 8  |
| <b>2.1</b> | Outputs . . . . .                   | 8  |
| <b>2.2</b> | Inputs . . . . .                    | 9  |
| <b>2.3</b> | Configuration . . . . .             | 10 |
| <b>2.4</b> | LEDs . . . . .                      | 10 |
| <b>3</b>   | Pin Assignment. . . . .             | 12 |
| <b>4</b>   | Technical Data . . . . .            | 14 |
| <b>5</b>   | ETAS Contact Addresses . . . . .    | 17 |
|            | Index . . . . .                     | 19 |



# 1 Introduction

---

This User's Guide contains the description of the PB1651PWM1 Module.

It consists of the following chapters:

- "Introduction" on page 5
  - "Features and Applications" on page 5
  - "Block Diagram" on page 7
- "Hardware Features" on page 8
  - "Outputs" on page 8
  - "Inputs" on page 9
  - "Configuration" on page 10
  - "LEDs" on page 10
- "Pin Assignment" on page 12
- "Technical Data" on page 14


## 1.1 Features and Applications

---

The PB1651PWM1 Module is used to generate and measure PWM and digital signals. It can be used both with the ES1651 Carrier Board (VMEbus) and with the ES4350 Carrier Board (VXIbus).

The PB1651PWM1 Module has 24 input channels and 16 output channels which can all be configured as PWM or digital I/O channels.


The following figure shows the front panel of the PB1651PWM1 Module.

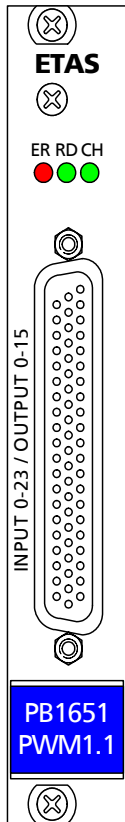

**Fig. 1-1** Front Panel of the PB1651PWM1 Module

## 1.2 Block Diagram

The following figure shows the block diagram of the PB1651PWM1 Module.

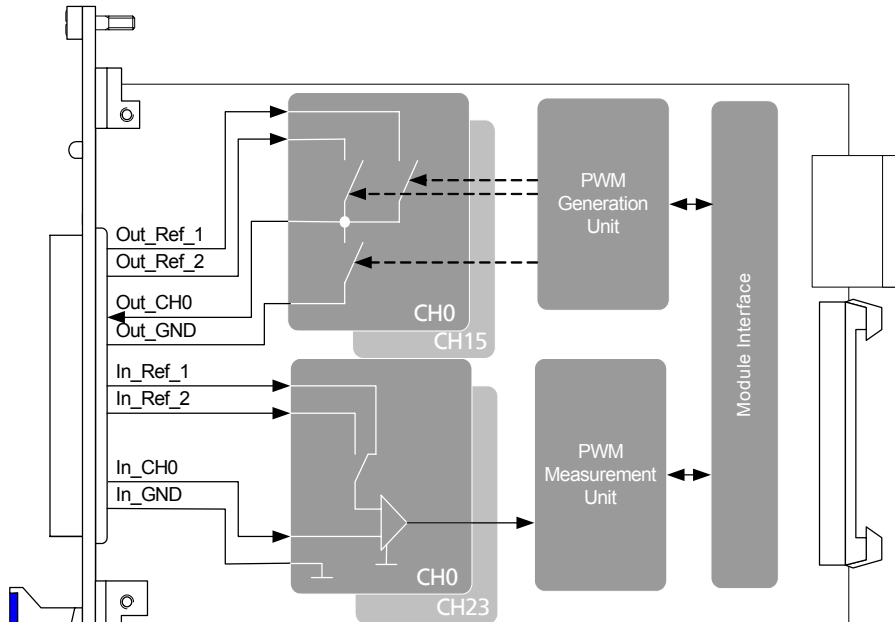

**Fig. 1-2** Block Diagram of the PB1651PWM1 Module

## 2 Hardware Features

This section contains a description of the inputs and outputs of the PB1651PWM1 Module.


### 2.1 Outputs

Each of the 16 outputs can be configured either as a TTL, UBatt or Open Collector output. Each channel has two "high-side" drivers and one "low-side" driver (see Fig. 2-1 on page 8).

The outputs have a resolution of 0.02% in the range 0 to 10 kHz and 0.2% in the range 0 to 100 kHz. The maximum output current per channel is 100 mA – the outputs are protected against overvoltage to +60 V.

The output voltage level is determined by two external supply voltages to be specified.

The following figure shows the block diagram of the outputs.

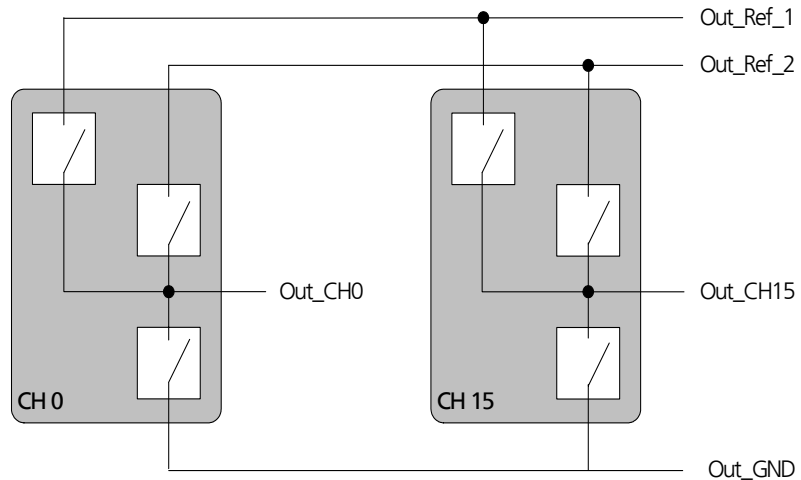

**Fig. 2-1** Block Diagram of the Outputs



## 2.2 Inputs

---

There are the following measuring modes for the 24 measuring inputs:


- Pulse width measuring
- Additive pulse width measuring
- Pulse and edge counting
- Frequency and cycle time measuring
- Duty cycle measuring
- Level measuring

These measuring procedures are described in the Real-Time Execution Connector V1.5 User's Guide.

The input voltages refer to two external reference voltages which are supplied via the front-facing connector. The threshold voltage for edge detection is  $In\_Ref\_1/2 * 0.5$ .

The inputs have overvoltage protection to +60 V.

The following figure shows the block diagram of the inputs.

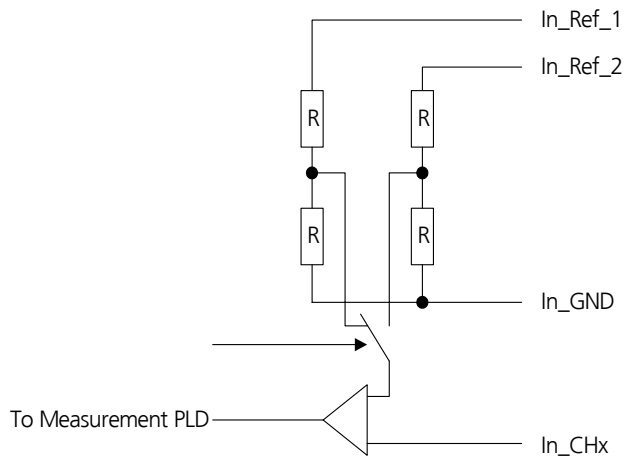

**Fig. 2-2** Block Diagram of the Inputs

## 2.3 Configuration

---

Signal output is configured and controlled by the Real-Time Execution Connector and LABCAR-OPERATOR. A hardware configuration of the module is not necessary.

## 2.4 LEDs

---

There are 3 LEDs on the front panel of the PB1651PWM1 Module, the meaning of which is described below.

ER RD CH  


**Fig. 2-3** LEDs on the Front Panel

The LEDs of the PB1651PWM1 Module have the following significance.

| LED | Color | Meaning   |
|-----|-------|---|
| ER  | Red   | Error   |
| RD  | Green | Ready   |
| CH  | Green | Can be configured using the software (see the section "Driving the "CH" LED" later in this chapter) |

**Tab. 2-1** Significance of the LEDs

### *Driving the "CH" LED*

---

The driving source of the "CH" LED can be configured in the software – one of the 24 input channels or "RTIO" can be set as the control source.

If an input channel is set as the driving source, the LED lights up when the channel level is high and does not light up when the channel level is low. If "RTIO" is set as the driving source, the LED can be powered on/off by the simulation model.

The "LED Driving Source" parameter is described in the Real-Time Execution Connector V1.5 User's Guide.

### *Display of the Version Number of the I/O Modules*

---


When the signal box is powered on, the I/O modules show the version number via the "RD" and "CH" LEDs. The version number consists of three parts (e.g. 2.1.3). First of all, the "RD" LED flashes twice ("CH" LED off). Then the "RD" LED flashes once ("CH" LED lights up). Then the "RD" LED flashes three times ("CH" LED off).

After the version number of the relevant I/O module has been displayed, the two LEDs, "RD" and "CH", go out and take on the relevant function of the I/O module used.

### 3 Pin Assignment

This section describes the pin assignment of the PB1651PWM1 Module.

The connector for the signal outputs is a DSub62HD connector (female). The shielding is at front panel and housing potential and thus at protective earth.

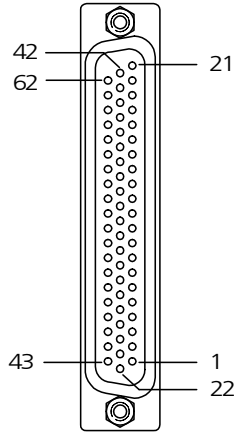

**Fig. 3-1** Front-Facing Connector of the PB1651PWM1 Module (View from the Plug-In Side)

The following table contains the connector pin assignment.

| Pin | Signal   | Pin | Signal    | Pin | Signal  |
|-----|----------|-----|-----------|-----|---------|
| 1   | Out_CH0  | 22  | NC        | 43  | In_CH0  |
| 2   | Out_CH1  | 23  | NC        | 44  | In_CH1  |
| 3   | Out_CH2  | 24  | In_Ref_1  | 45  | In_CH2  |
| 4   | Out_CH3  | 25  | In_Ref_1  | 46  | In_CH3  |
| 5   | Out_CH4  | 26  | Out_Ref_1 | 47  | In_CH4  |
| 6   | Out_CH5  | 27  | Out_Ref_1 | 48  | In_CH5  |
| 7   | Out_CH6  | 28  | Out_Ref_2 | 49  | In_CH6  |
| 8   | Out_CH7  | 29  | Out_Ref_2 | 50  | In_CH7  |
| 9   | Out_CH8  | 30  | In_Ref_2  | 51  | In_CH8  |
| 10  | Out_CH9  | 31  | In_Ref_2  | 52  | In_CH9  |
| 11  | Out_CH10 | 32  | Out_GND   | 53  | In_CH10 |
| 12  | Out_CH11 | 33  | Out_GND   | 54  | In_CH11 |

**Tab. 3-1** Pin Assignment of the PB1651PWM1 Module

| Pin | Signal   | Pin | Signal | Pin | Signal  |
|-----|----------|-----|--------|-----|---------|
| 13  | Out_CH12 | 34  | In_GND | 55  | In_CH12 |
| 14  | Out_CH13 | 35  | In_GND | 56  | In_CH13 |
| 15  | Out_CH14 | 36  | NC     | 57  | In_CH14 |
| 16  | Out_CH15 | 37  | NC     | 58  | In_CH15 |
| 17  | NC       | 38  | NC     | 59  | In_CH16 |
| 18  | In_CH20  | 39  | NC     | 60  | In_CH17 |
| 19  | In_CH21  | 40  | NC     | 61  | In_CH18 |
| 20  | In_CH22  | 41  | NC     | 62  | In_CH19 |
| 21  | In_CH23  | 42  | NC     |     |         |

**Tab. 3-1** Pin Assignment of the PB1651PWM1 Module (cont'd.)

## 4 Technical Data

This section contains the technical data of the PB1651PWM1 Module in tabular form.

### *Outputs*

|   |                                       |
|---|---------------------------------------|
| Number of channels  | 16                                    |
| Output voltage $V_{out}$ referring to Out_GND when switching output to external reference voltage | U_Out_Ref - 1 V<br>...U_Out_Ref       |
| External supply voltages 1 + 2  | 0 V...+60 V                           |
| Output voltage $V_{out}$ referring to Out_GND when switching output to Out_GND                    | Out_GND...<br>Out_GND + 1 V           |
| Output overvoltage protection   | +60 V                                 |
| Output current supplied by external references 1 + 2  | 0...100 mA                            |
| Resistance between GND and Out_GND  | 1 k $\Omega$ ... $\infty$             |
| Frequency range   | 0...100 kHz                           |
| Accuracy at 0...10 kHz  | 0.02%                                 |
| Accuracy at 0..0.100 kHz  | 0.2%                                  |
| Frequency resolution  | 0.012 Hz                              |
| Duty cycle resolution   | 8 Bit at 100 kHz,<br>16 Bit at 500 Hz |
| Clock frequency for PWM generation  | 20 ns                                 |

### *Inputs*

---

|  |                           |
|--|---------------------------|
| Number of channels                               | 24                        |
| Input voltage range                              | 0 V...+36 V               |
| Input reference voltage range                    | +5 V...+60 V              |
| Input impedance                                  | 1 M $\Omega$ , 10 pF      |
| Max. input frequency                             | 100 kHz                   |
| Input overvoltage protection                     | $\pm$ 60 V                |
| Hysteresis of input signals                      | 1...1.5 V                 |
| Resistance between GND and In_GND                | 1 k $\Omega$ ... $\infty$ |
| Counter width for PWM low/high time measurements | 31-bit                    |
| Clock frequency for PWM generation               | 20 ns                     |

### *Power Supply*

---

|                     |   |
|---------------------|---|
| Current consumption | 0 A @ +2.5 V DC<br>70 mA @ +3.3 V DC<br>1.8 A @ +5 V DC<br>0 A @ +12 V DC<br>0 A @ -12 V DC |
|---------------------|---|

### *Environmental Conditions*

---

|                       |                                     |
|-----------------------|-------------------------------------|
| Operating temperature | 5 °C to 35 °C (5.00 °C to 35.00 °C) |
| Relative humidity     | 0 to 95% (non-condensing)           |

### *Physical Dimensions*

---

|                               |                            |
|-------------------------------|----------------------------|
| Printed circuit board (L x W) | 145 mm x 100 mm            |
| Front panel                   | Height: 3 U<br>Width: 4 HP |





## 5 **ETAS Contact Addresses**

---

### *ETAS HQ*

---

#### **ETAS GmbH**

|                 |         |                     |
|-----------------|---------|---------------------|
| Borsigstr. 14   | Phone:  | +49 711 8 96 61-0   |
| 70469 Stuttgart | Fax:    | +49 711 8 96 61-105 |
| Germany         | E-mail: | sales@etas.de       |
|                 | WWW:    | www.etasgroup.com   |

### *North America*

---

#### **ETAS Inc.**

|                     |         |                   |
|---------------------|---------|-------------------|
| 3021 Miller Road    | Phone:  | +1 888 ETAS INC   |
| Ann Arbor, MI 48103 | Fax:    | +1 734 997-9449   |
| USA                 | E-mail: | sales@etas.us     |
|                     | WWW:    | www.etasgroup.com |

### *Japan*

---

#### **ETAS K.K.**

|                              |         |                   |
|------------------------------|---------|-------------------|
| Queen's Tower C-17F          | Phone:  | +81 45 222-0900   |
| 2-3-5, Minatomirai, Nishi-ku | Fax:    | +81 45 222-0956   |
| Yokohama 220-6217            | E-mail: | sales@etas.co.jp  |
| Japan                        | WWW:    | www.etasgroup.com |

### *Great Britain*

---

#### **ETAS Ltd.**

|                           |         |                   |
|---------------------------|---------|-------------------|
| Studio 3, Waterside Court | Phone:  | +44 1283 54 65 12 |
| Third Avenue, Centrum 100 | Fax:    | +44 1283 54 87 67 |
| Burton-upon-Trent         | E-mail: | sales@etas-uk.net |
| Staffordshire DE14 2WQ    | WWW:    | www.etasgroup.com |
| Great Britain             |         |                   |

*France*

---

**ETAS S.A.S**

1, place des Etats-Unis  
SILIC 307  
94588 Rungis Cedex  
France

Phone: +33 (1) 56 70 00 50  
Fax: +33 (1) 56 70 00 51  
E-mail: sales@etas.fr  
WWW: www.etasgroup.com

*Korea*

---

**ETAS Korea Co. Ltd.**

4F, 705 Bldg. 70-S  
Yangjae-dong, Seocho-gu  
Seoul 137-889  
Korea

Phone: +82 2 57 47 - 016  
Fax: +82 2 57 47 - 120  
E-mail: sales@etas.co.kr

*China*

---

**ETAS (Shanghai) Co., Ltd.**

2404 Bank of China Tower  
200 Yinchon Road Central  
Shanghai 200120, P.R. China

Phone: +86 21 5037 2220  
Fax: +86 21 5037 2221  
E-mail: sales.cn@etasgroup.com  
WWW: www.etasgroup.com

---

# Index

## **B**

Block diagram 7

## **C**

Configuration 10

## **F**

Features 8

## **I**

Inputs 9

Introduction 5

## **L**

LEDs 10

## **O**

Outputs 8

## **P**

Pin assignment 12

## **T**

Technical data 14

